

Getting Started

Za početak

Required Items:

- ❖ MicroSD with SX OS [boot.dat] – [Download](#)
- ❖ Xecuter SX Lite
- ❖ Switch Lite
- ❖ Fine-Tip Soldering Iron (340c) / Solder
- ❖ Tri-Wing Y00 and Phillips #00
- ❖ Thermal Paste

Potrebni predmeti:


- MicroSD kartica sa SX OS [boot.dat] - Preuzmi
- Xecuter Sx Lite
- Switch Lite
- Lemilica sa malim vrhom (340°C) / Lem
- Odvijači: Tri-Wing Y00 i Phillips #00 križni
- Termalna pasta

Recommended Tools:


- ❖ Liquid Flux
- ❖ Microscope or Jeweler's Glasses
- ❖ Isopropyl Alcohol (91% or Higher)
- ❖ Cotton Swabs / Micro Swabs
- ❖ Tin Snips / Cutters
- ❖ Kapton / Electrical Tape

Preporučeni alat:


- Pasta za lemljenje
- Mikroskop za lemljenje ili naočale koje se koriste u dućanima s nakitom
- Izopropil alkohol(91% ili jači)
- Štapići sa vatom / Četkice za bris
- Škare za rezanje lima / rezači
- Kapton / Izolir traka

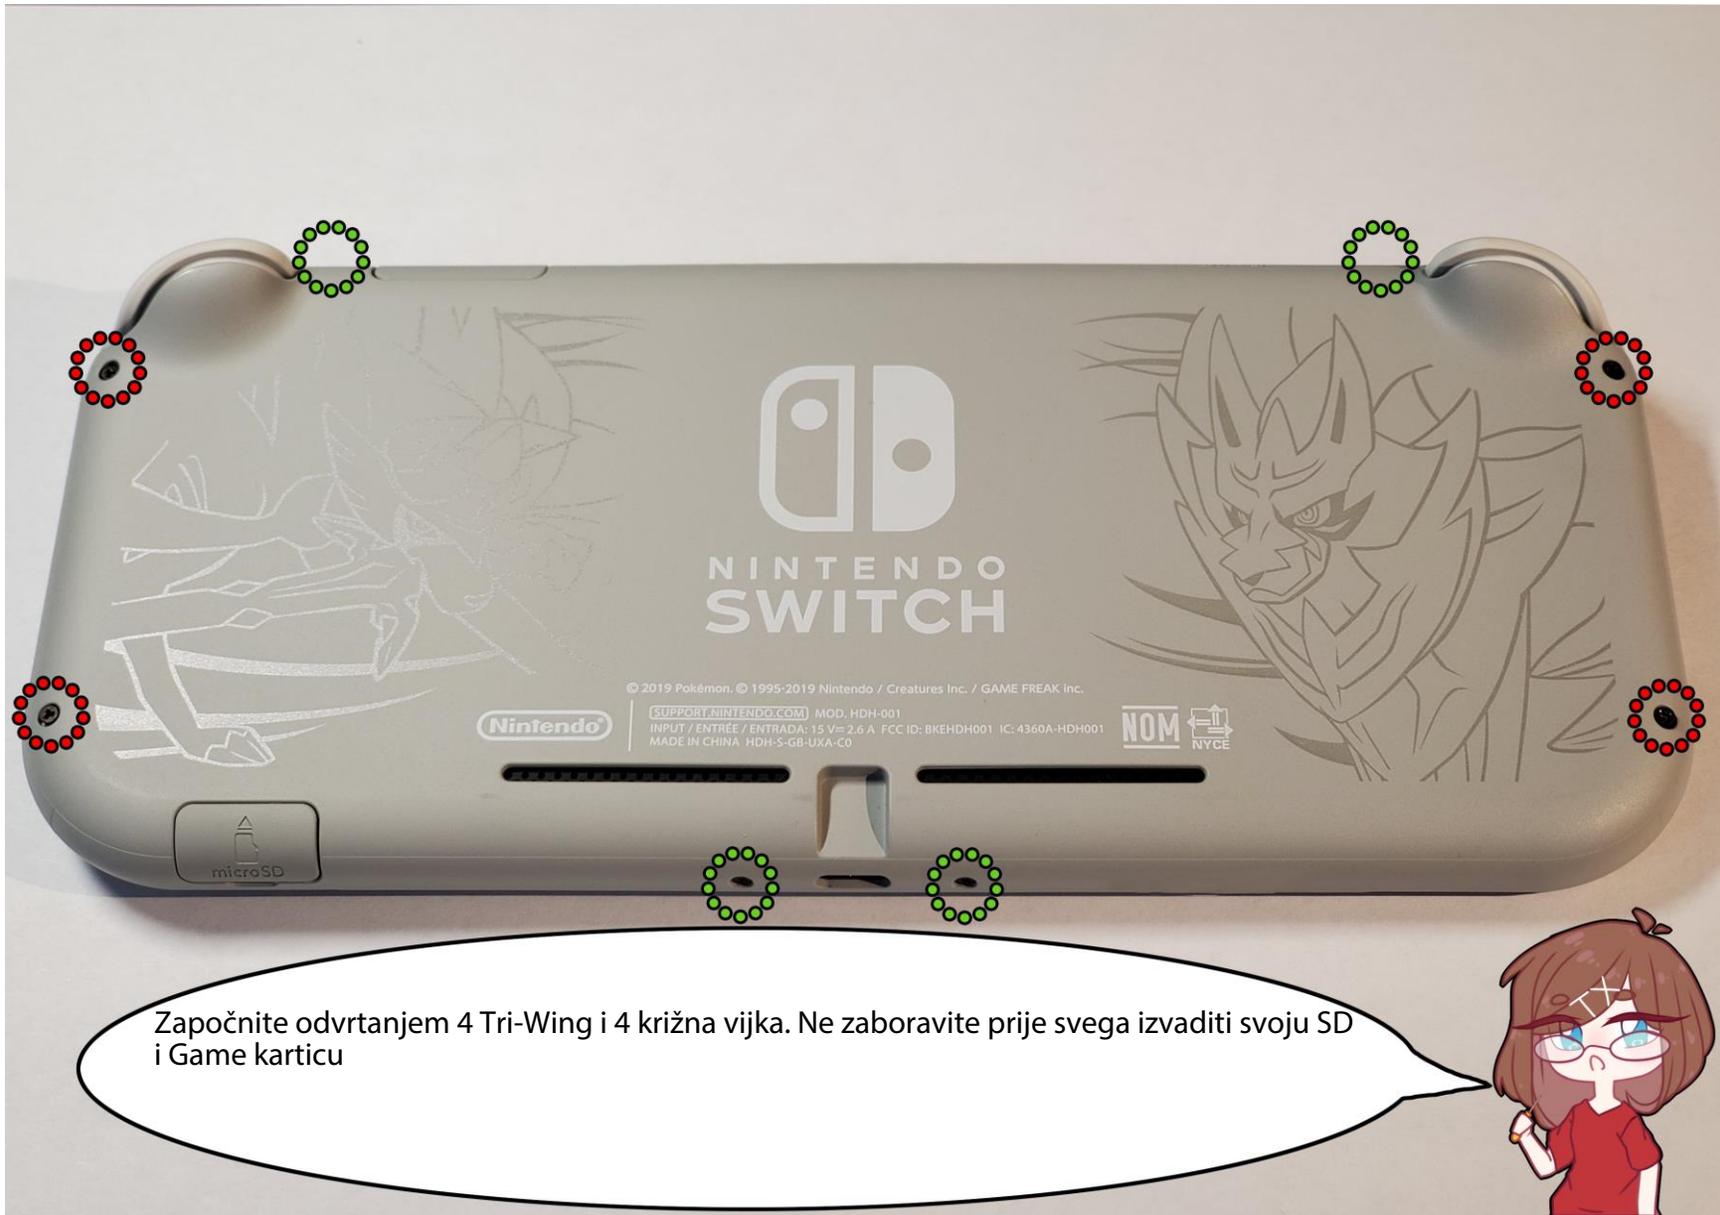


Pripazite na ovaj flat kabel dok odšaraflijujete i uklanjate zaštitni lim

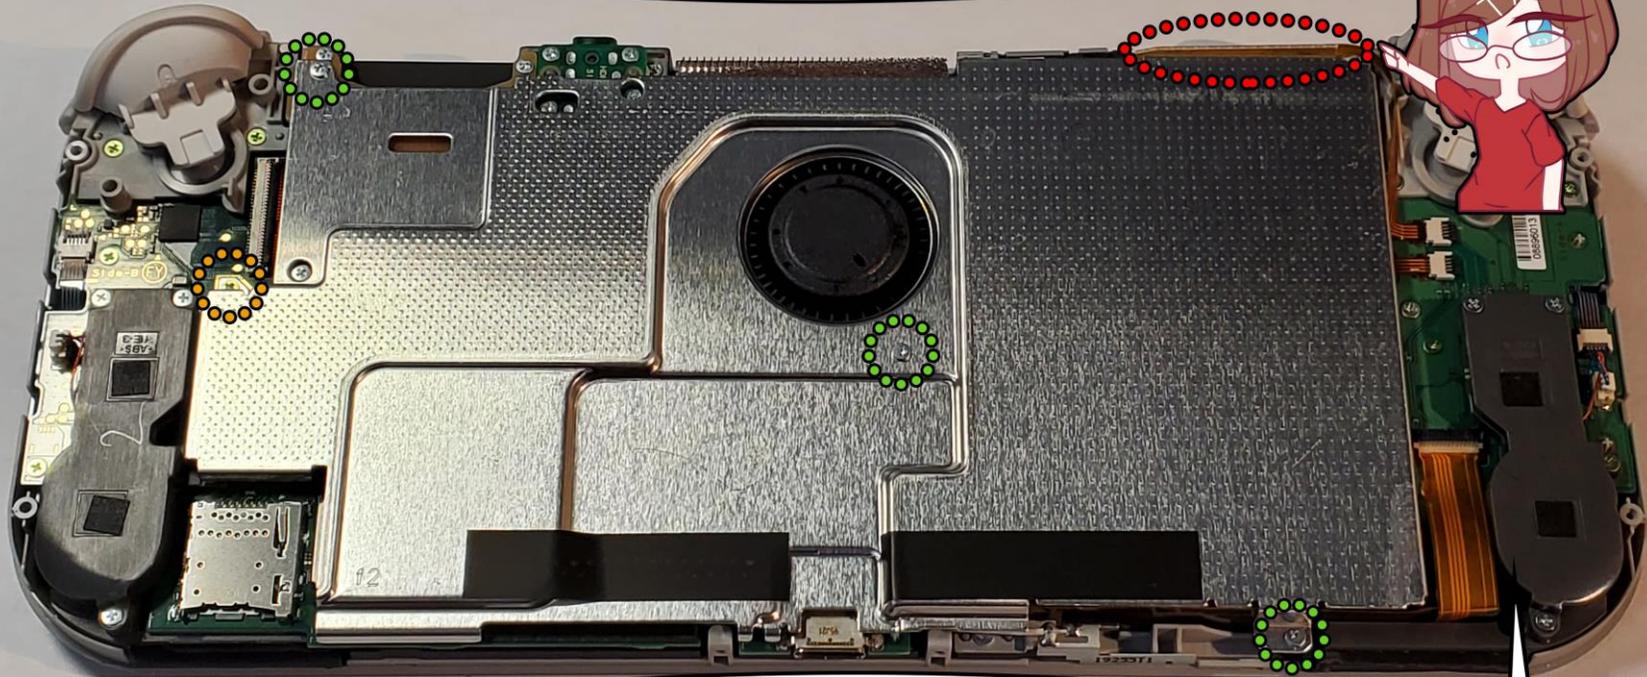


Zlatni vijak je duži od ostalih. Dok podižete lim, obratite pažnju na termalnu pastu koja se nalazi ispod.

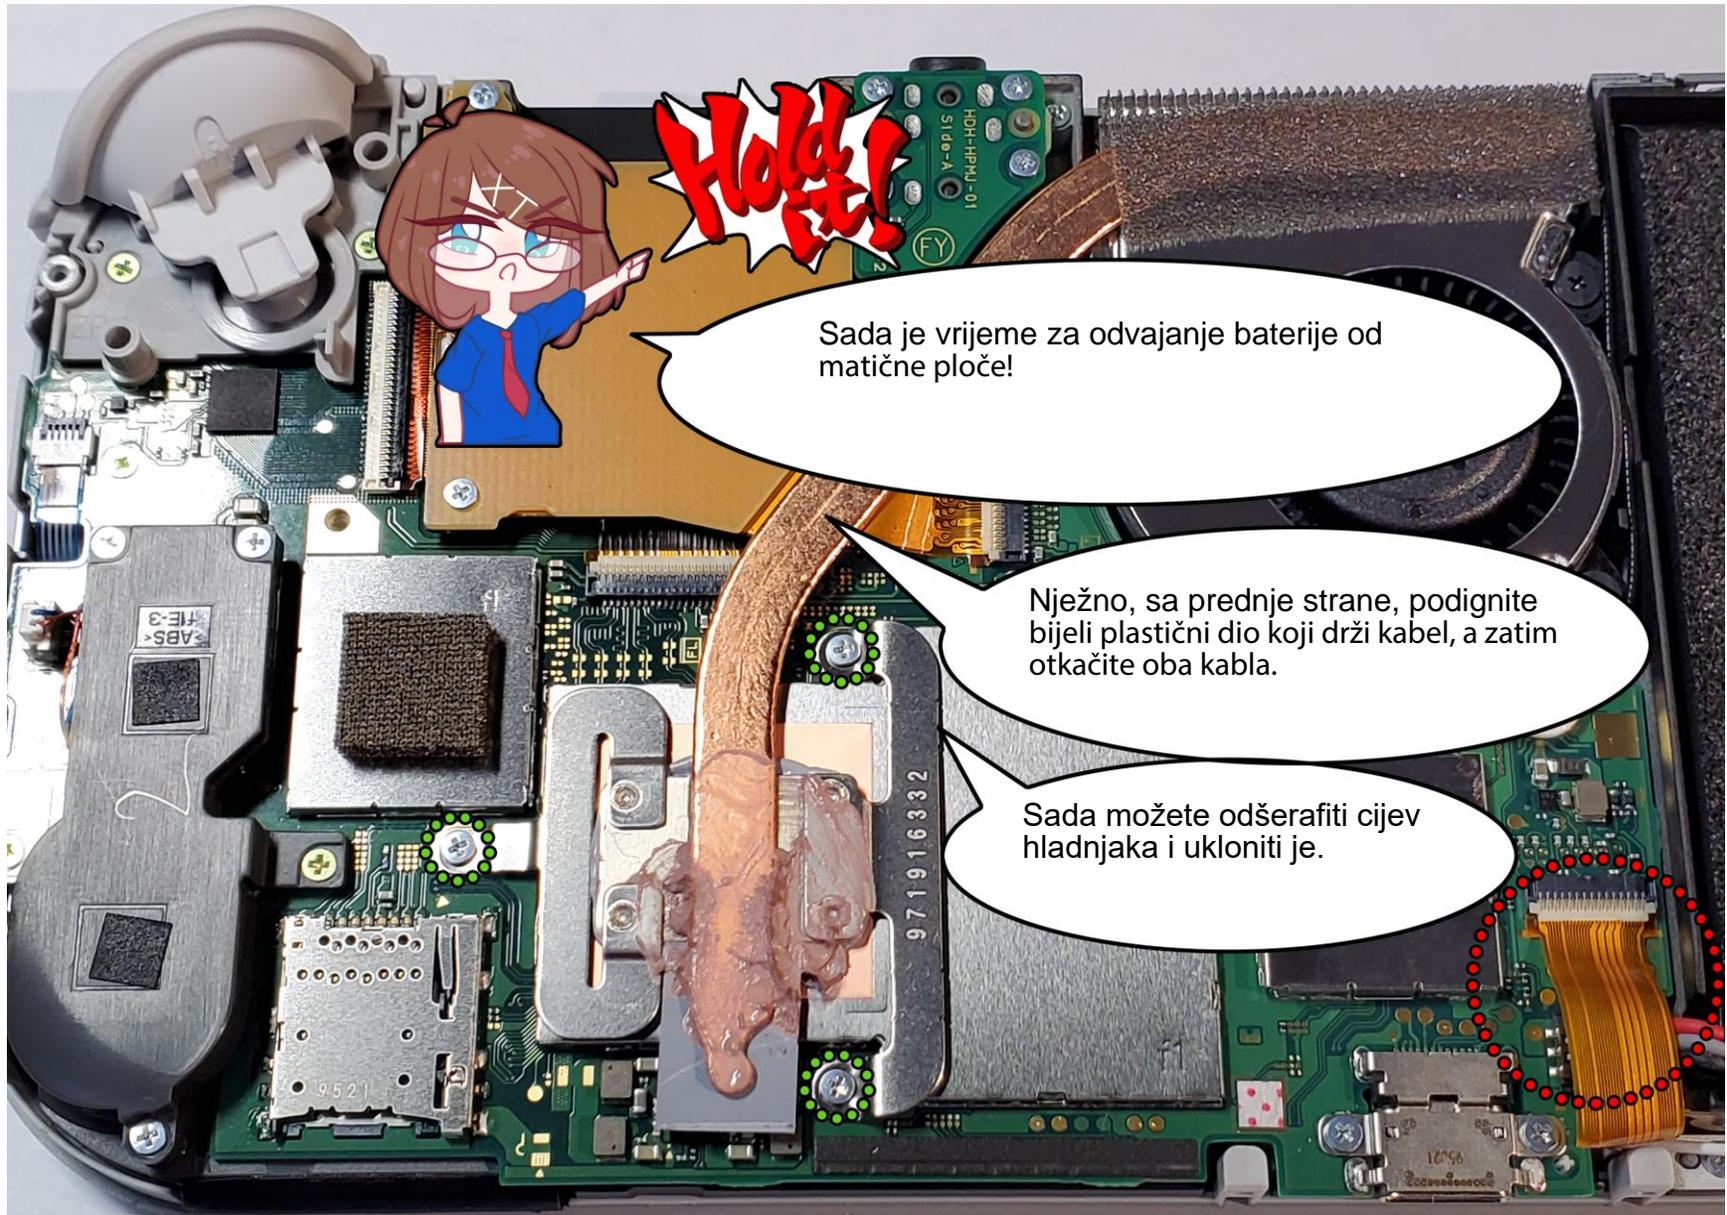


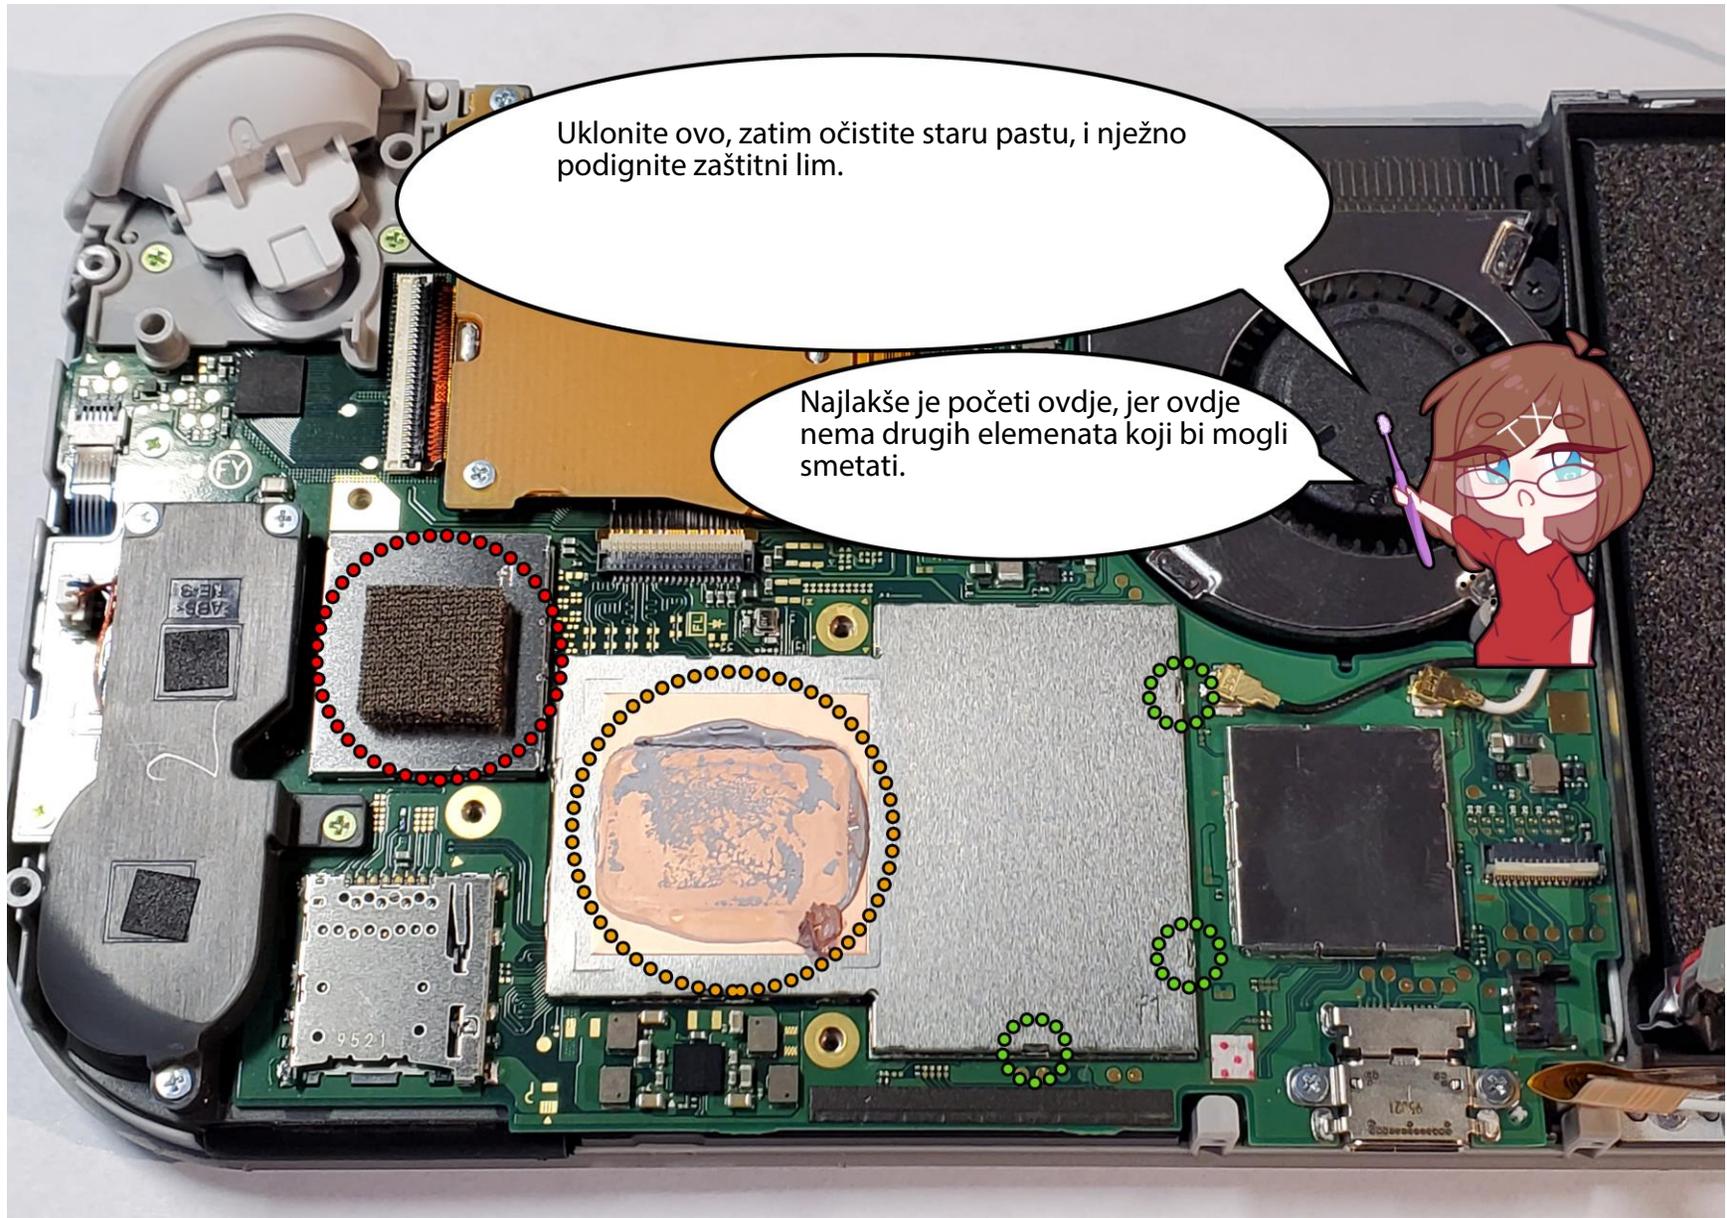


Uklonite ovo, zatim očistite staru pastu, i nježno podignite zaštitni lim.

Najlakše je početi ovdje, jer ovdje nema drugih elemenata koji bi mogli smetati.

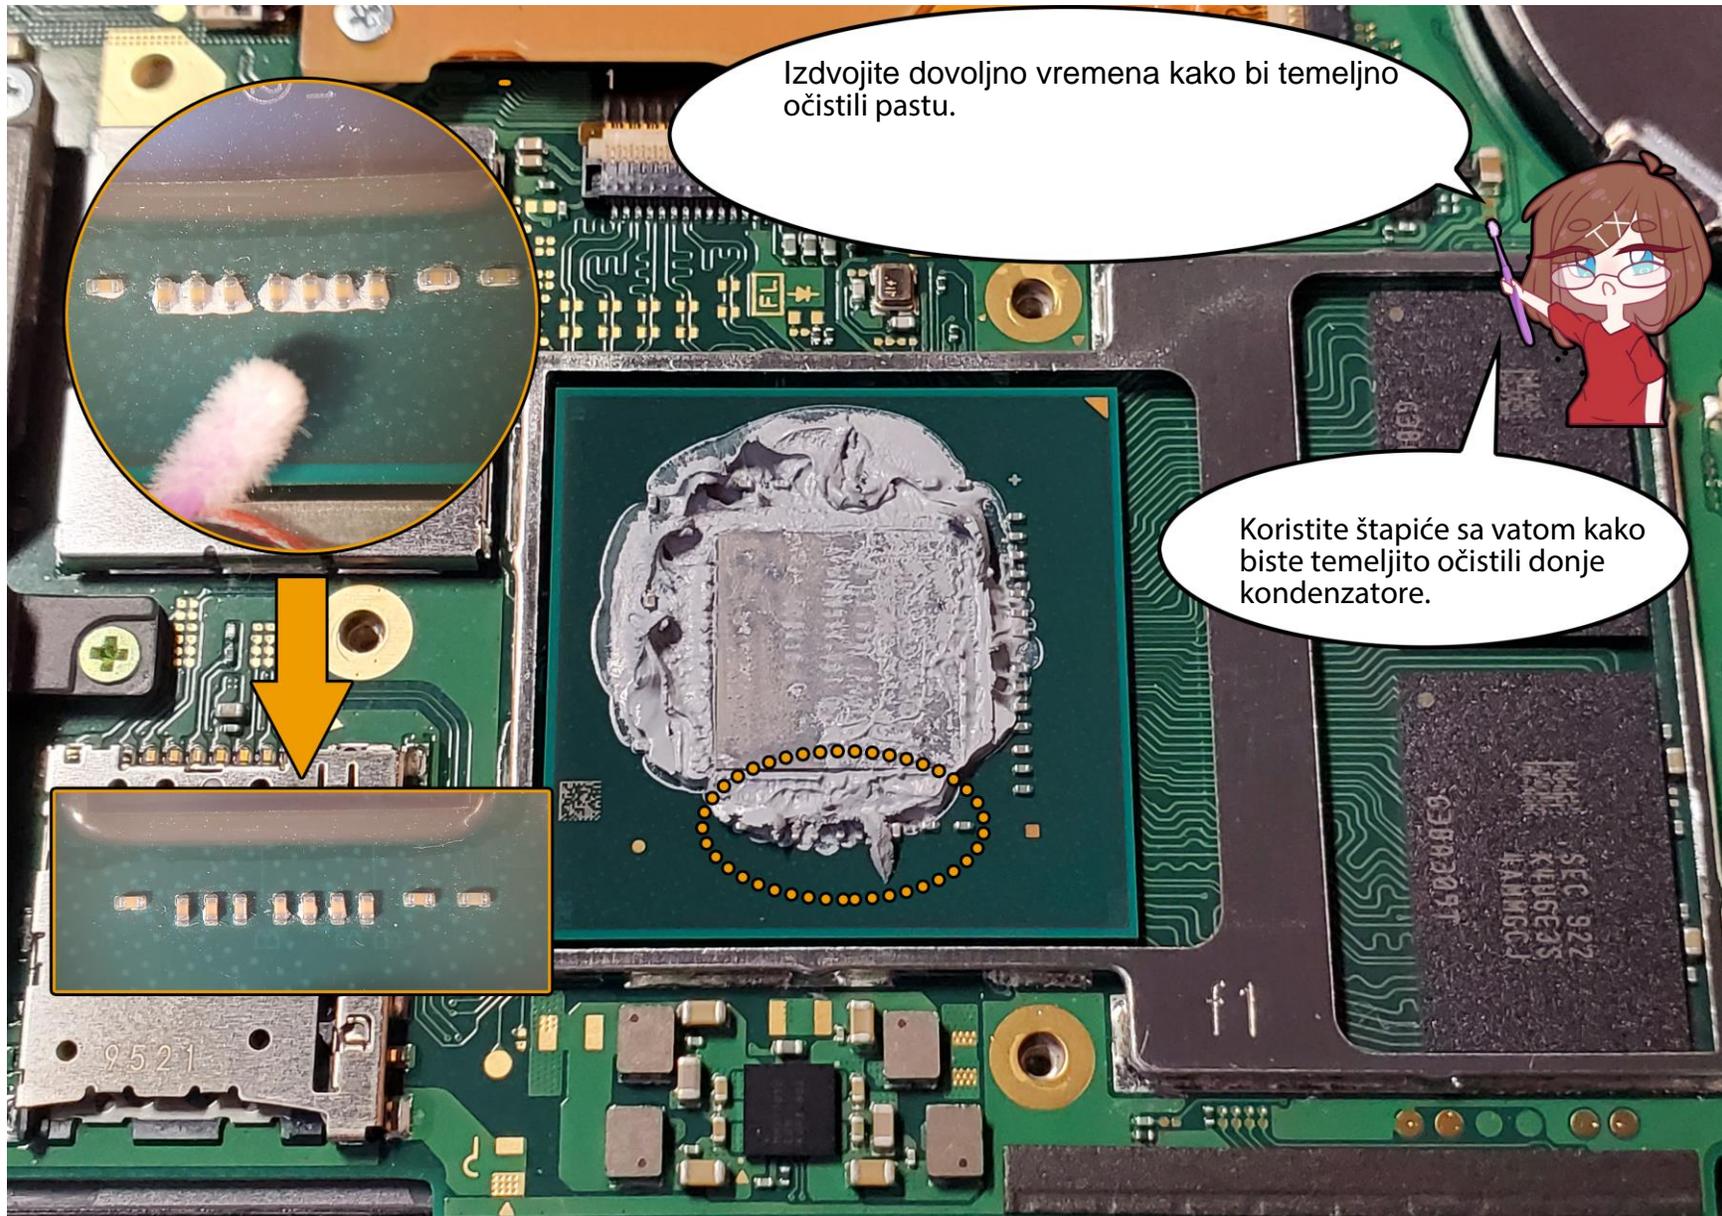


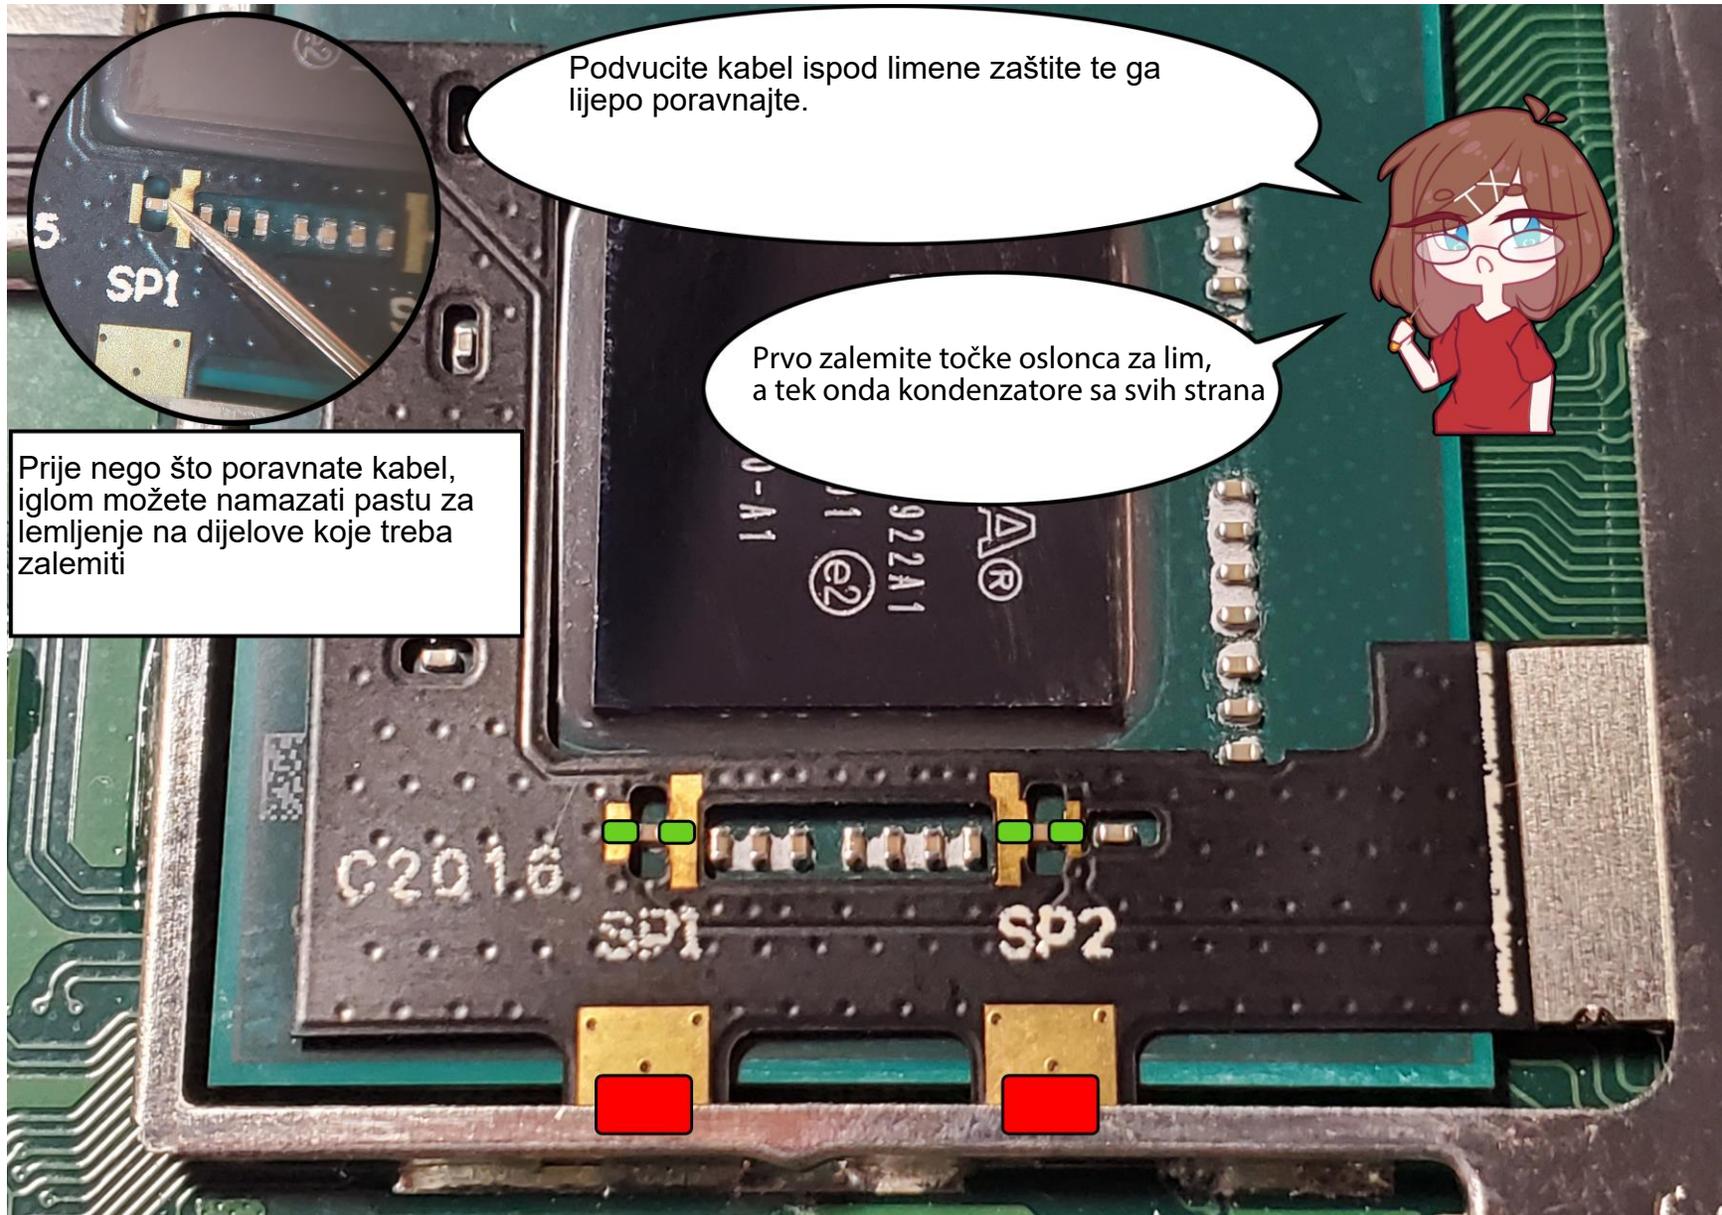


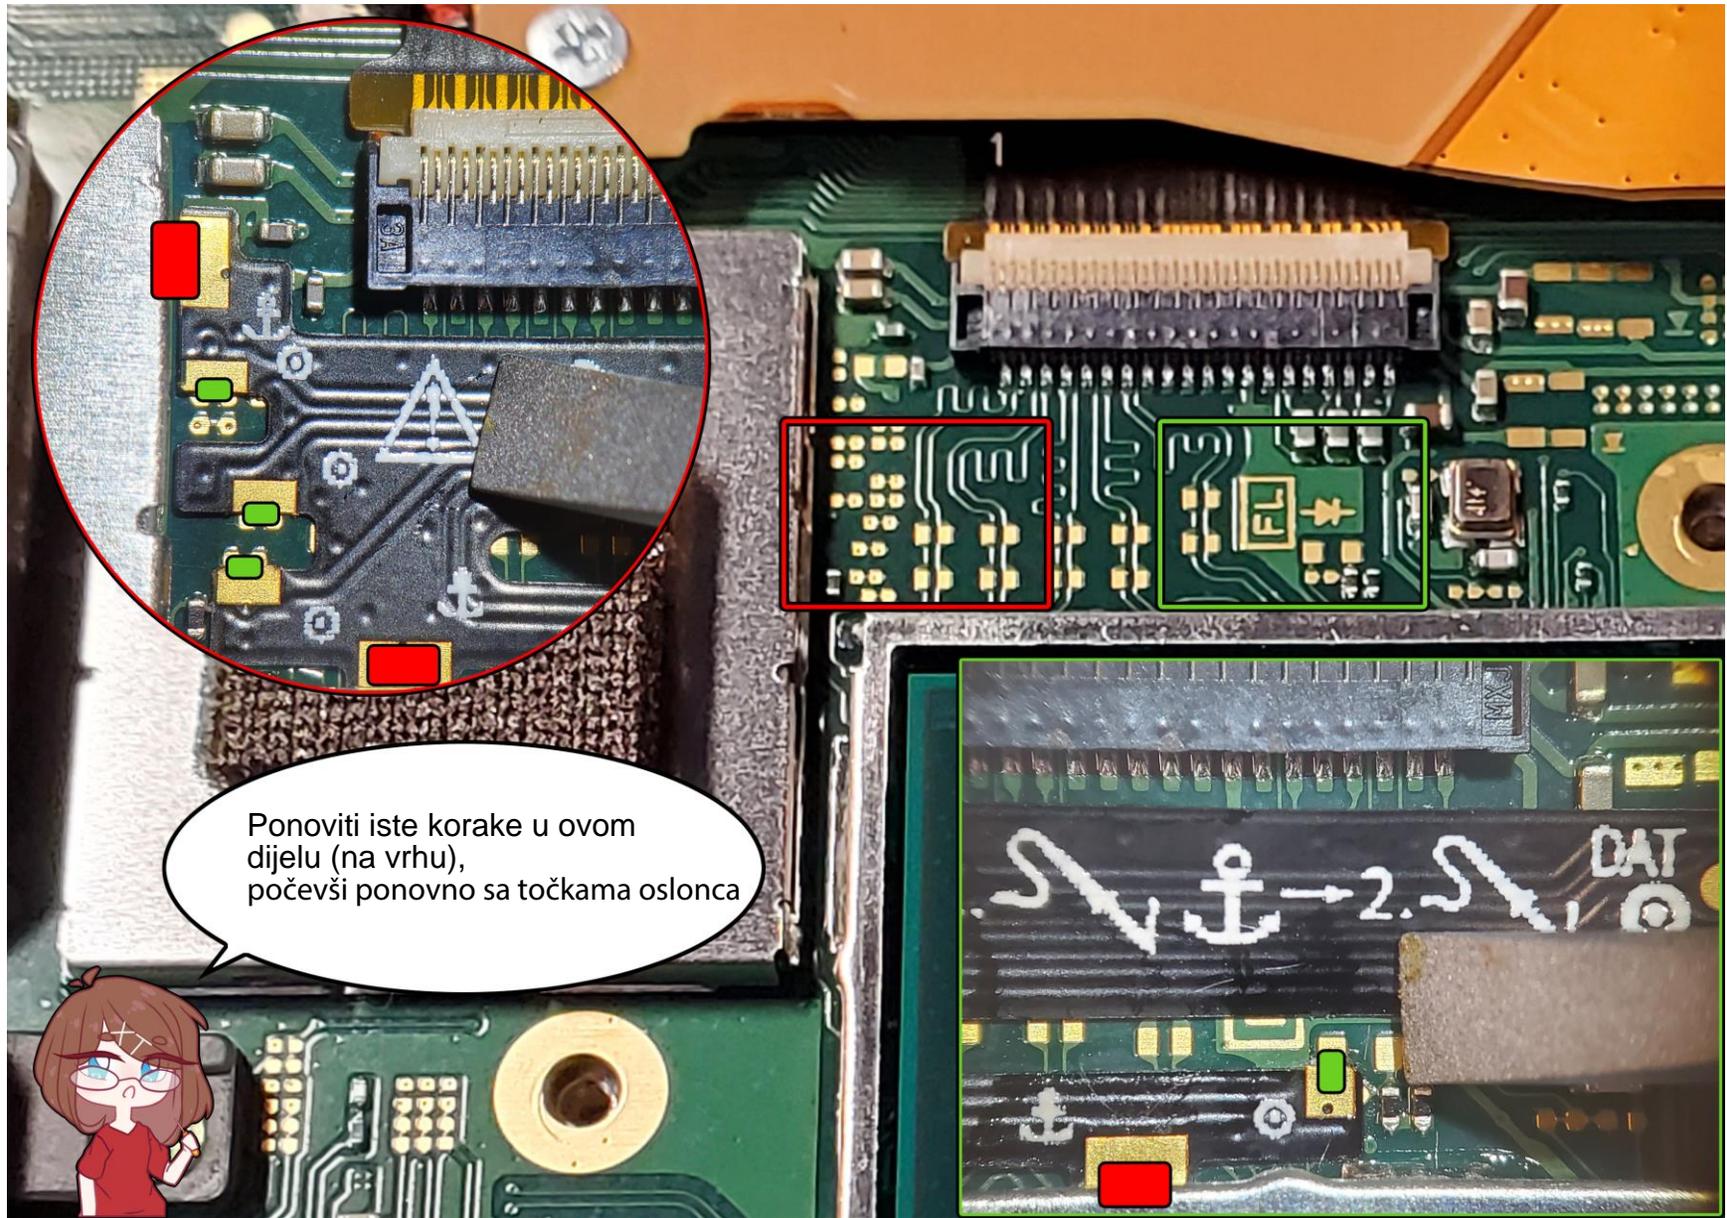





Ponoviti iste korake u ovom dijelu (na vrhu), počevši ponovno sa točkama oslonca



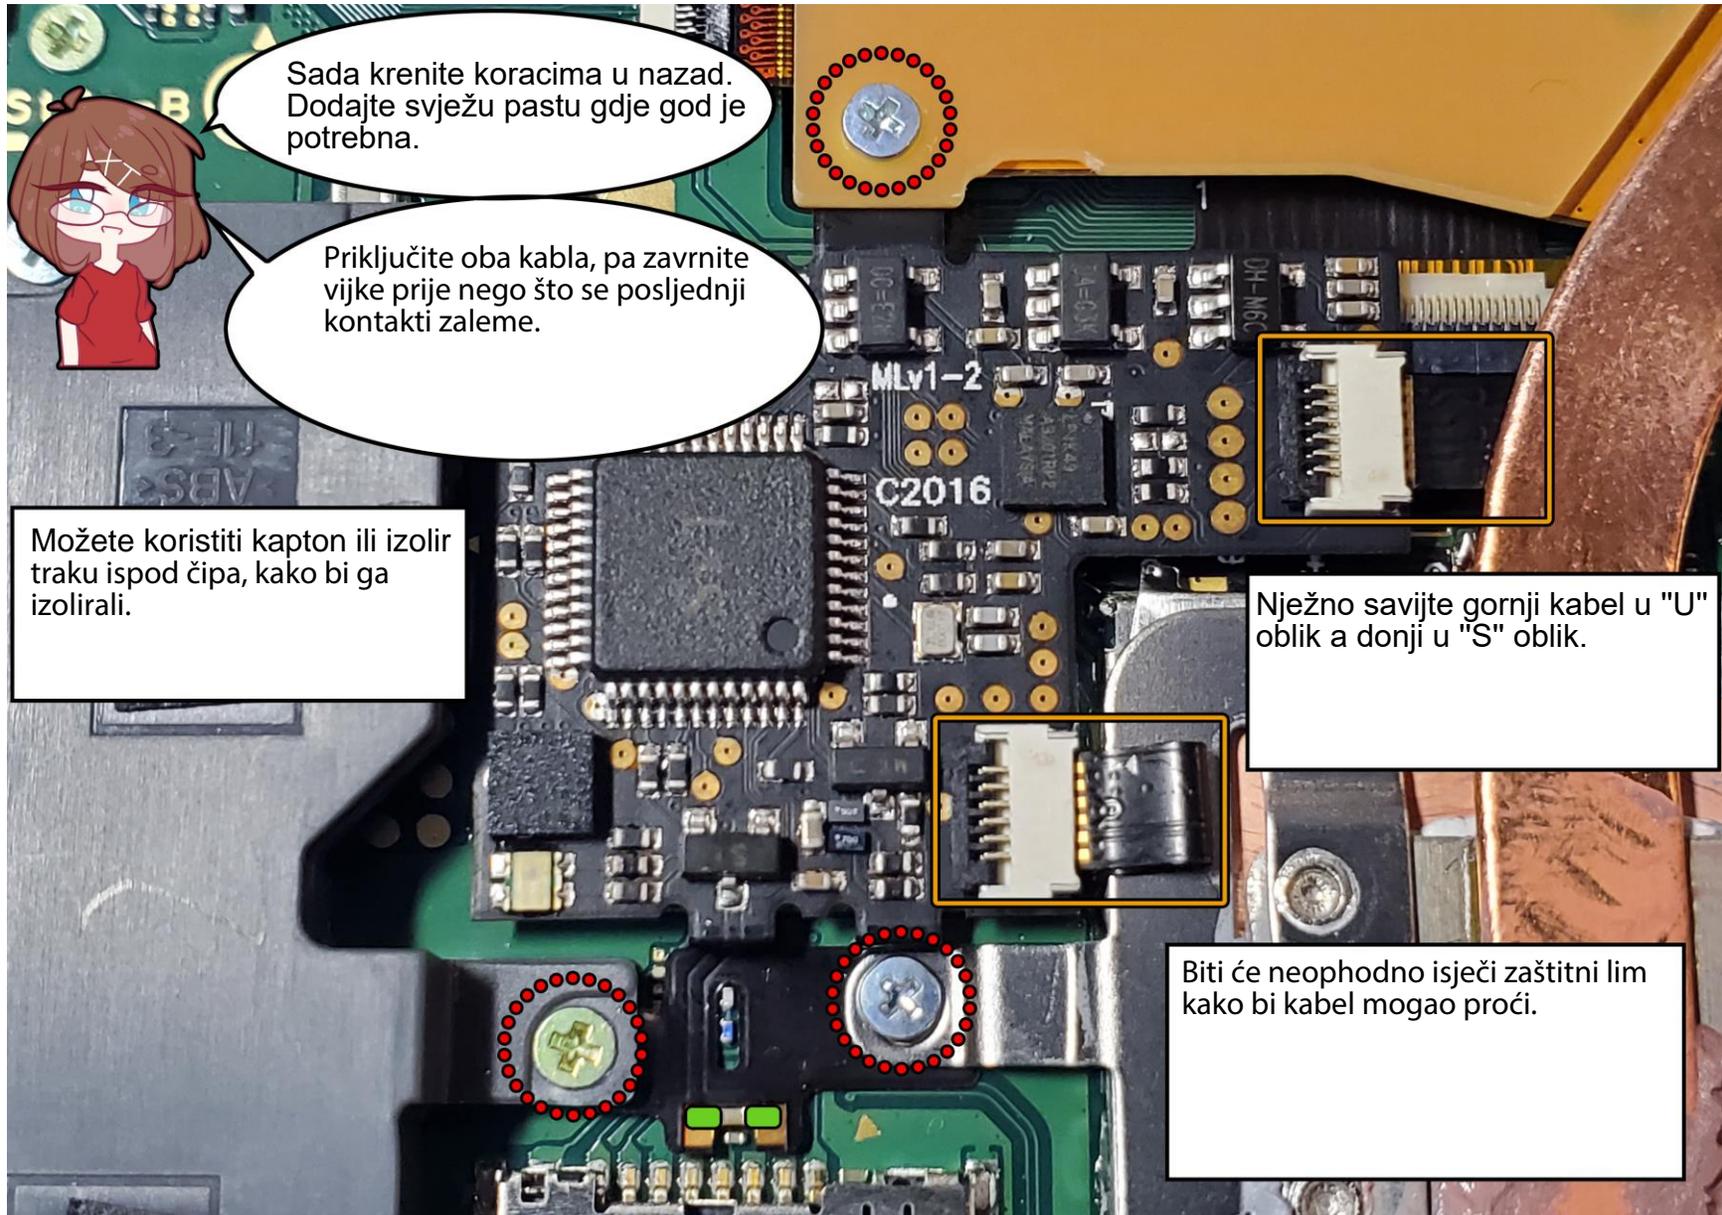

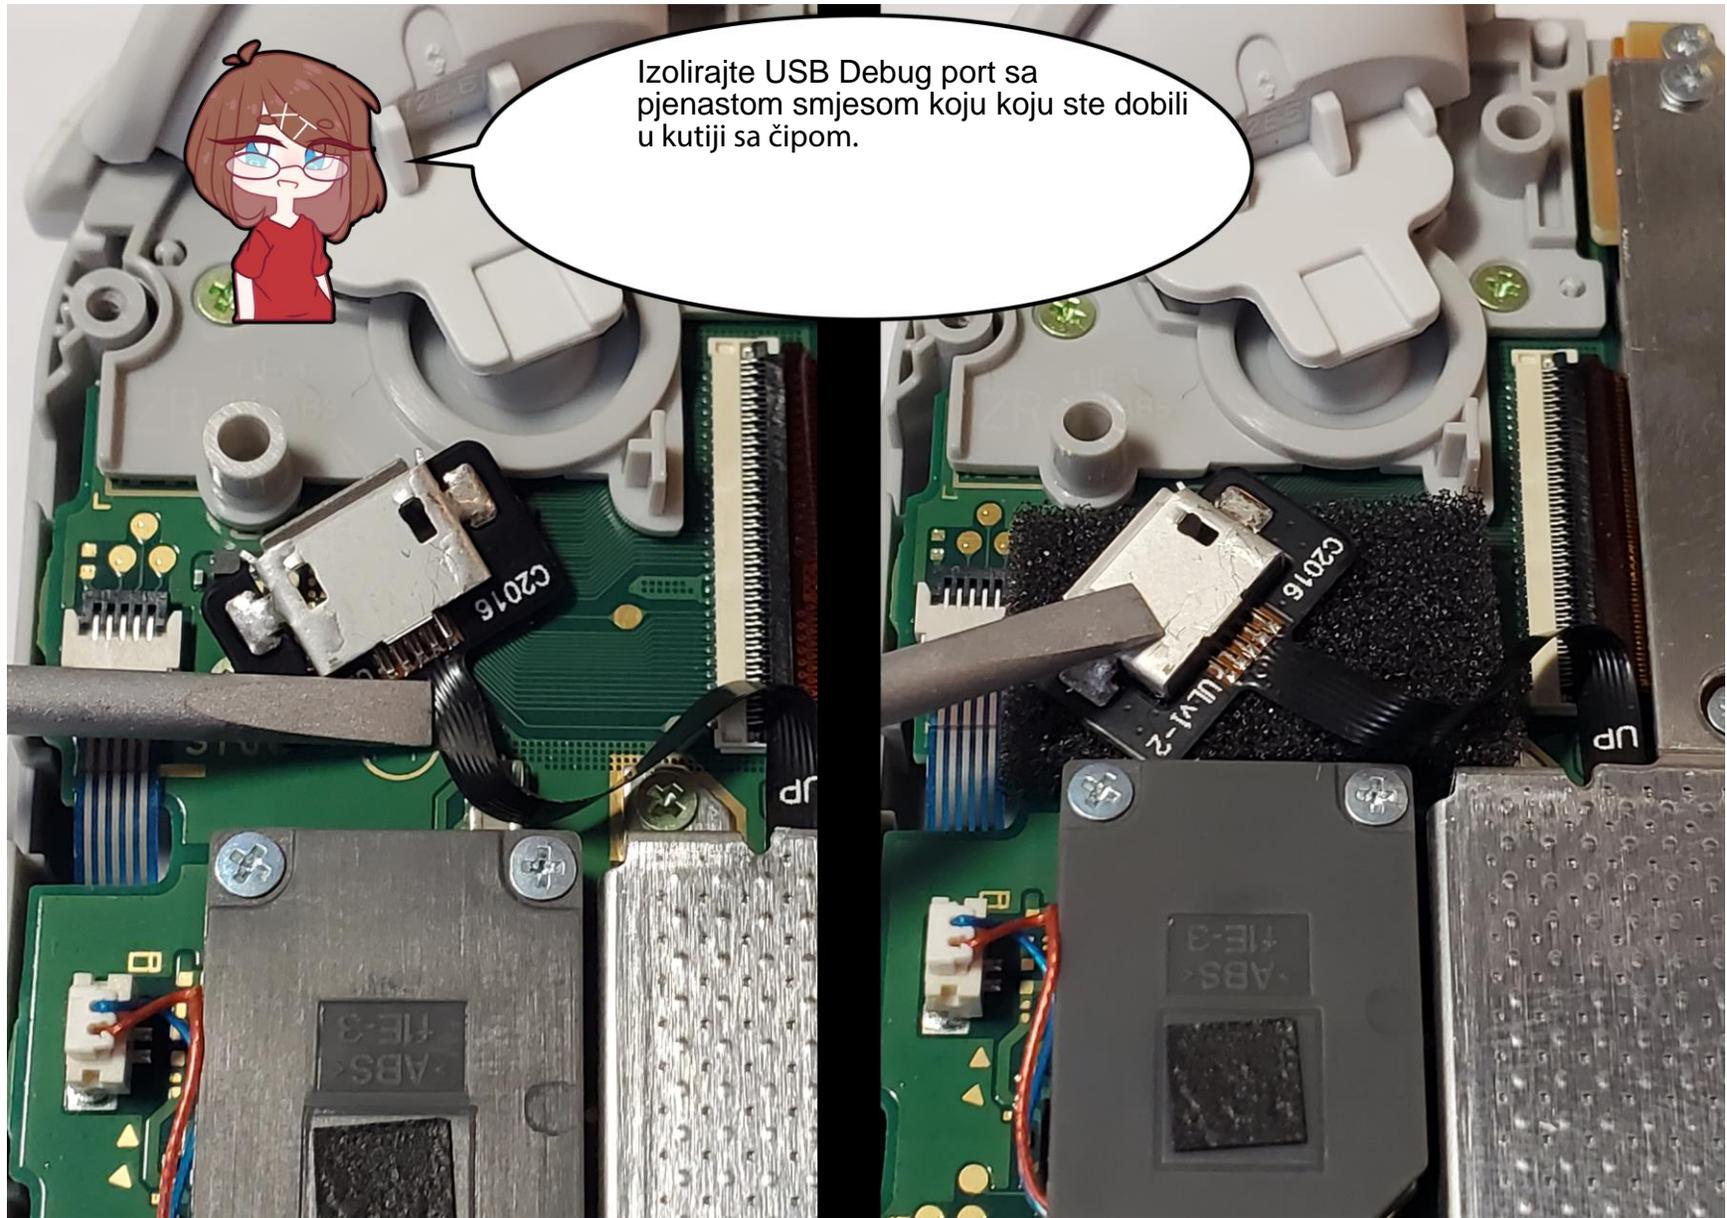

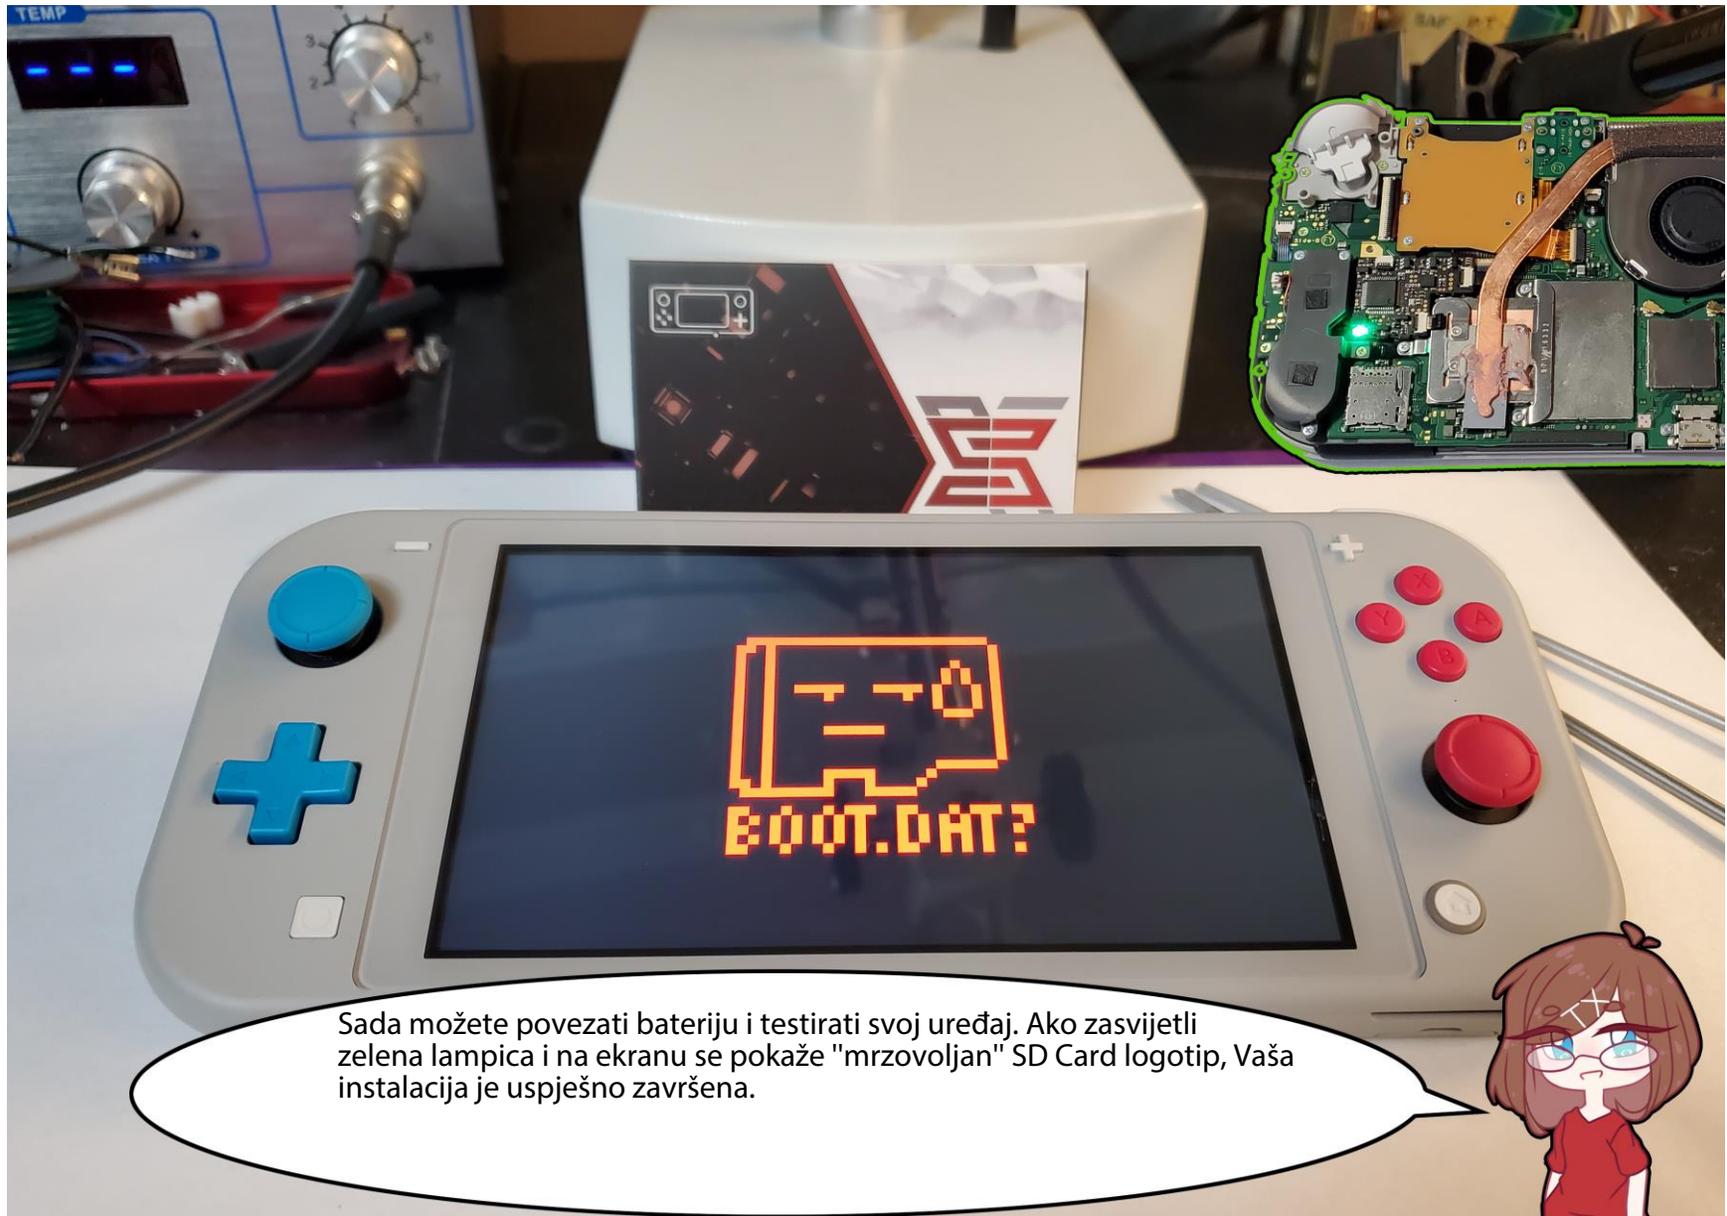

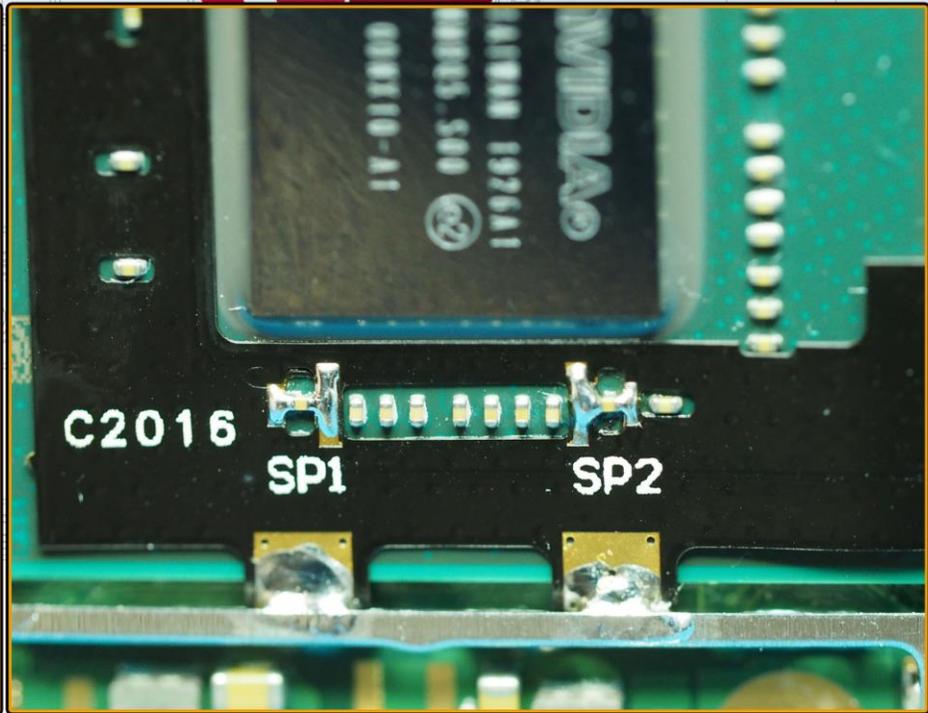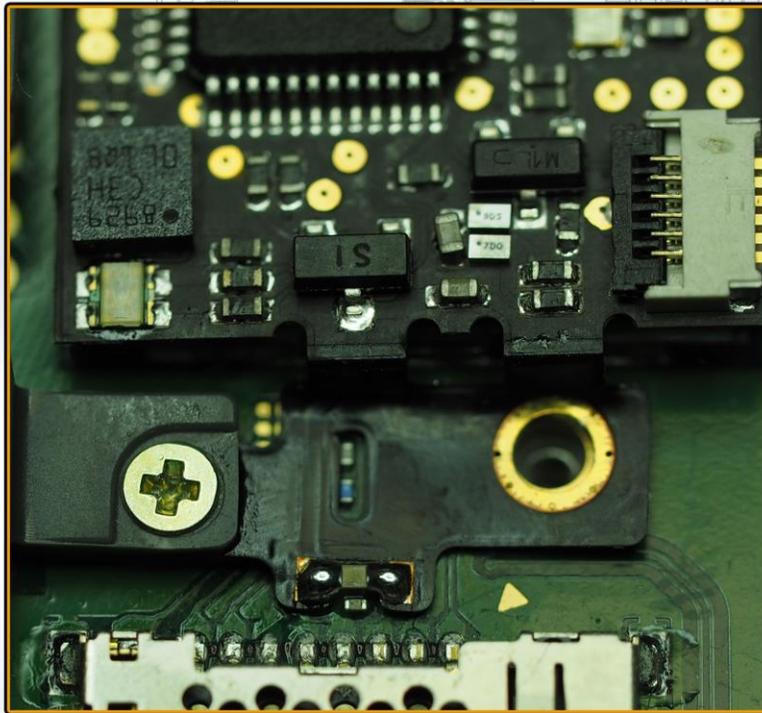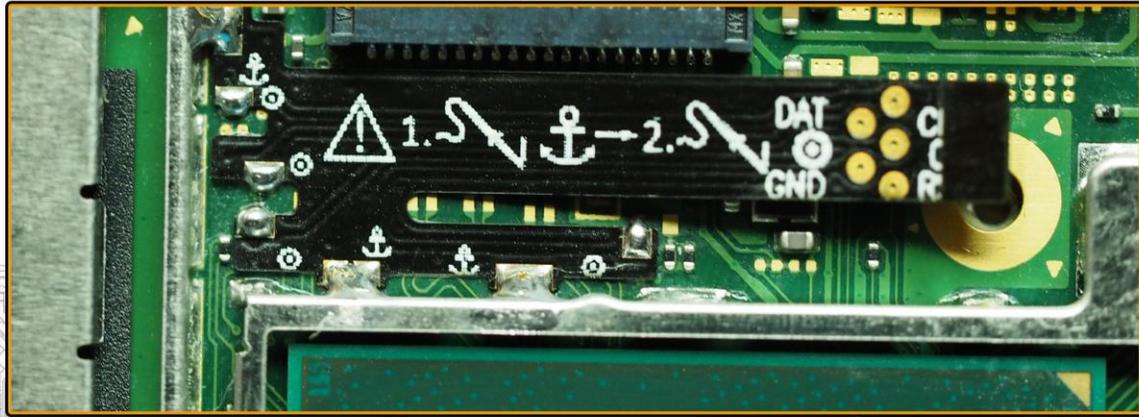

FAQ

Najčešća pitanja

Q - How difficult is this installation?

A - This is an advanced installation, if you don't have the proper tools or experience, we recommend contacting your local tiny soldering guy or mod shop to have the installation done for you.

P - Koliko je zahtjevna ova instalacija?

O - Ova instalacija zahtjeva napredne vještine lemljenja. Ukoliko nemate potrebno iskustvo sa lemljenjem i alat, preporučujemo Vam da kontaktirate lokalnog majstora, ili specijaliziran servis, kako bi netko drugi odradio instalaciju za Vas.

Q - The light turns pink and system won't boot.

A - This means the chip is having trouble talking to the NAND, typically from bad solder joints.

P - Lampica je roze boje i sistem se ne želi pokrenuti.

O - Ovo znači da čip ima lošu komunikaciju sa NAND-om, što vjerovatno znači da postoji prekid u zalemljenim kontaktima.

Q - The light turns green and boots to the bootloader, but the Switch OS won't boot.

A - Make sure you are using a FAT32 formatted SD card, as you may be missing the exFAT driver. You may also need check the connection of SP1.

P - Lampica je zelene boje i podiže se bootloader, ali Switch OS se ne podiže.

O - SD kartica mora biti formatirana u FAT32 formatu. Možda Vam nedostaje exFAT driver. Također je uputno provjeriti vezu sa SP1

Q - I need more help!

A - Join the support forums (<https://team-xecuter.com/community/>) or chat (<https://xecuter.rocks/>).

P - Treba mi dodatna pomoć!

O - Pridružite se našim forumima za podršku (<https://team-xecuter.com/community/>) ili na chatu (<https://xecuter.rocks/>)