


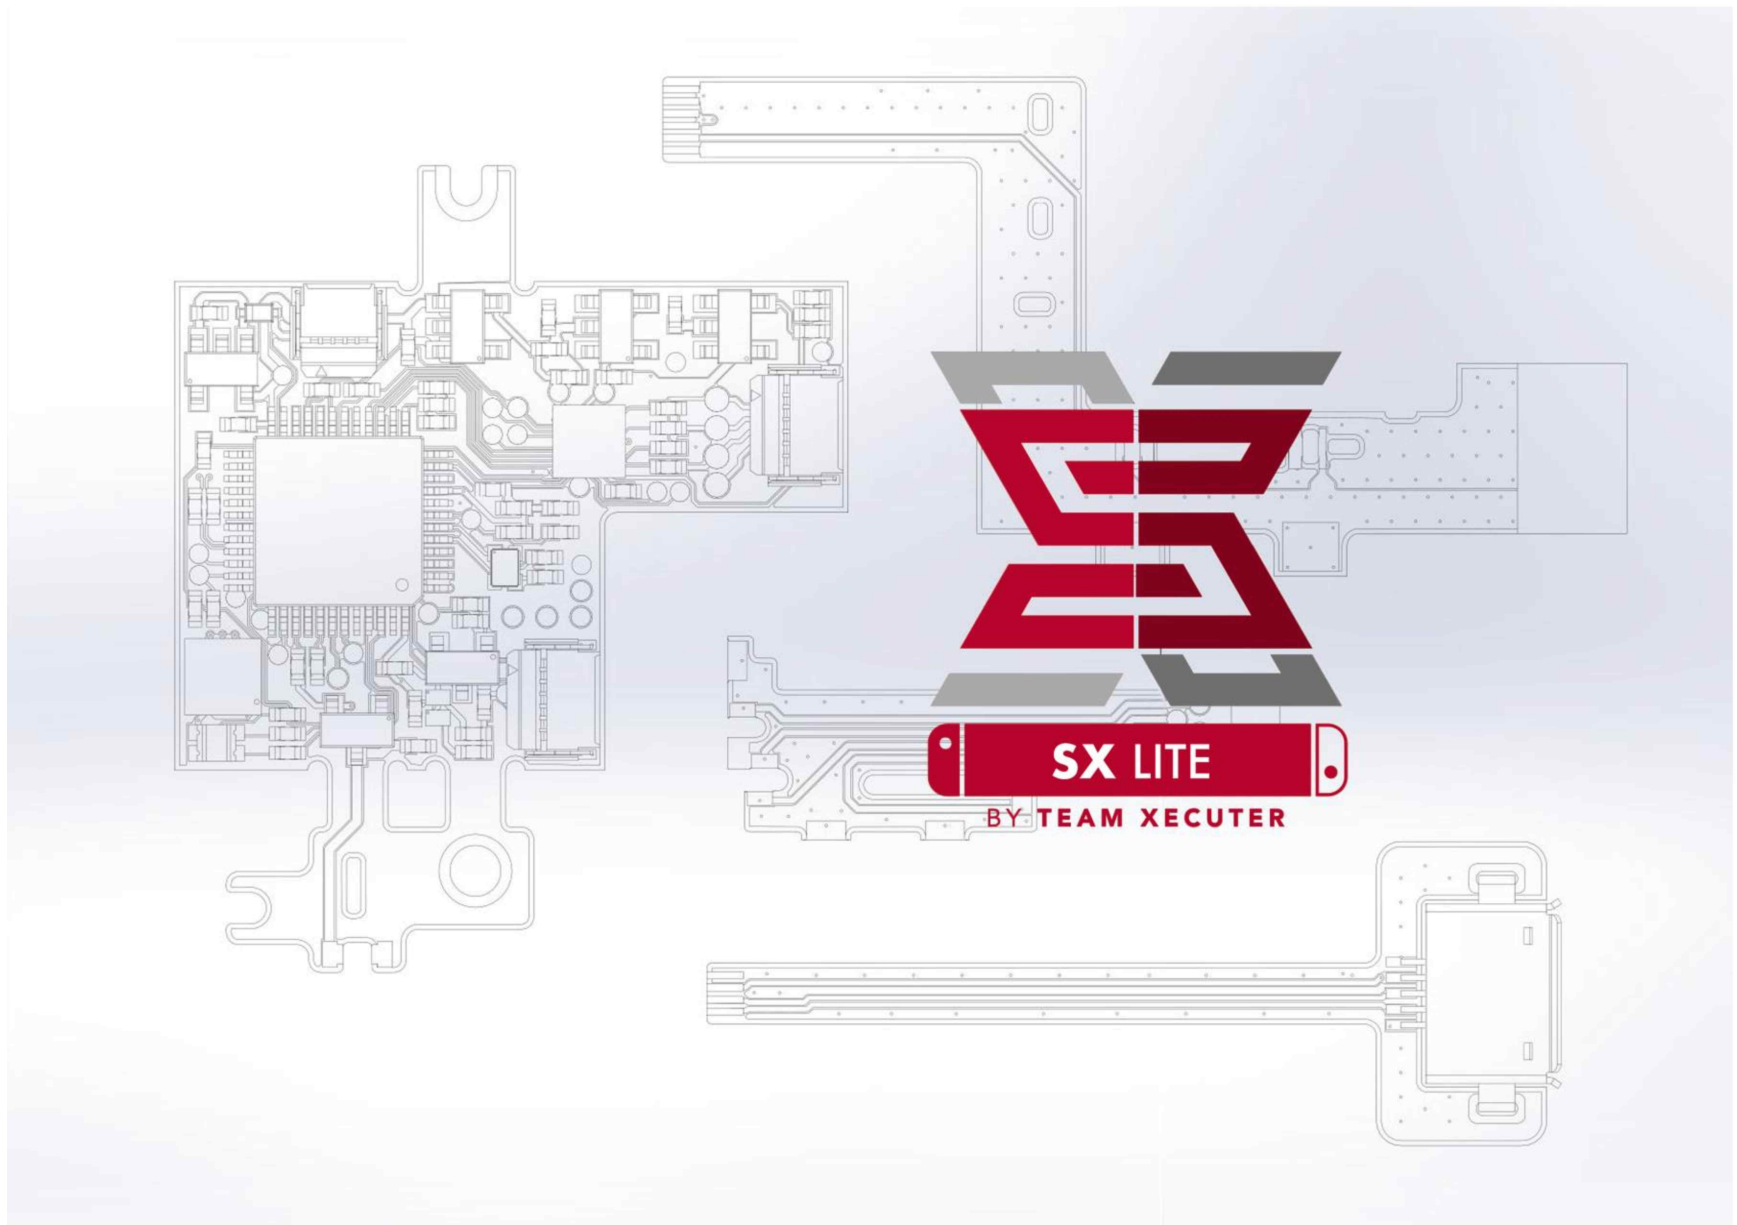

Pasimula

Kailangan na Gamit:


- ❖ MicroSD with SX OS [boot.dat] – [Download](#)
- ❖ Xecuter SX Lite
- ❖ Switch Lite
- ❖ Fine-Tip Soldering Iron (340c) / Solder
- ❖ Tri-Wing Y00 and Phillips #00
- ❖ Thermal Paste

Inirerekomendang Kagamitan:


- ❖ Liquid Flux
- ❖ Microscope or Jeweler's Glasses
- ❖ Isopropyl Alcohol (91% or Higher)
- ❖ Cotton Swabs / Micro Swabs
- ❖ Tin Snips / Cutters
- ❖ Kapton / Electrical Tape





TIGNAN MABUTI ANG FLEX NA
KABLE HABANG TINATANGGAL ANG
TURNILYO AT TAKIP!

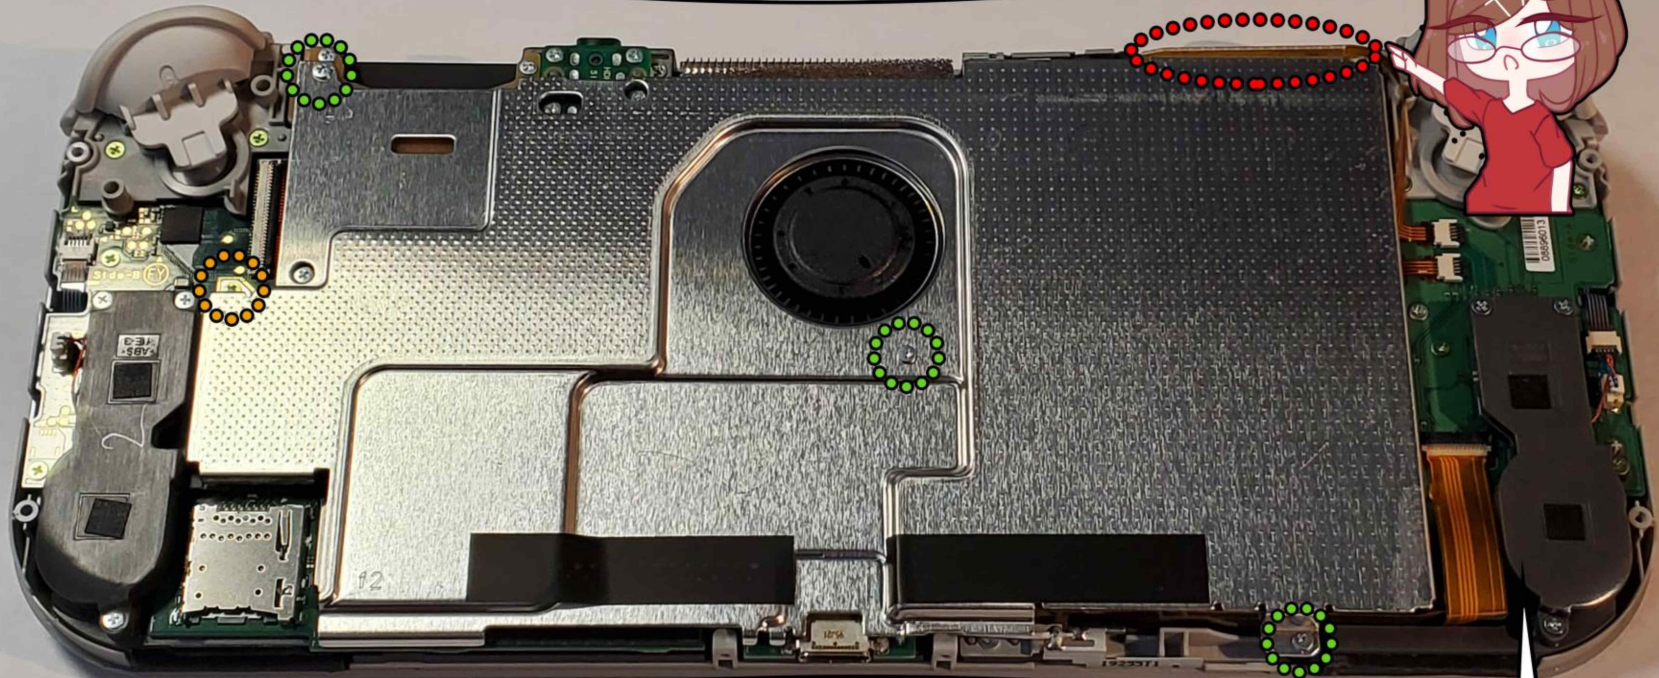



ANG **GINTO** NA TURNILYO AY MAS MAHABA
KUMPARA SA IBA. HABANG INAANGAT ANG TAKIP,
MAGINGAT SA THERMAL NA
MASILYA SA ILALIM NANG TAKIP!

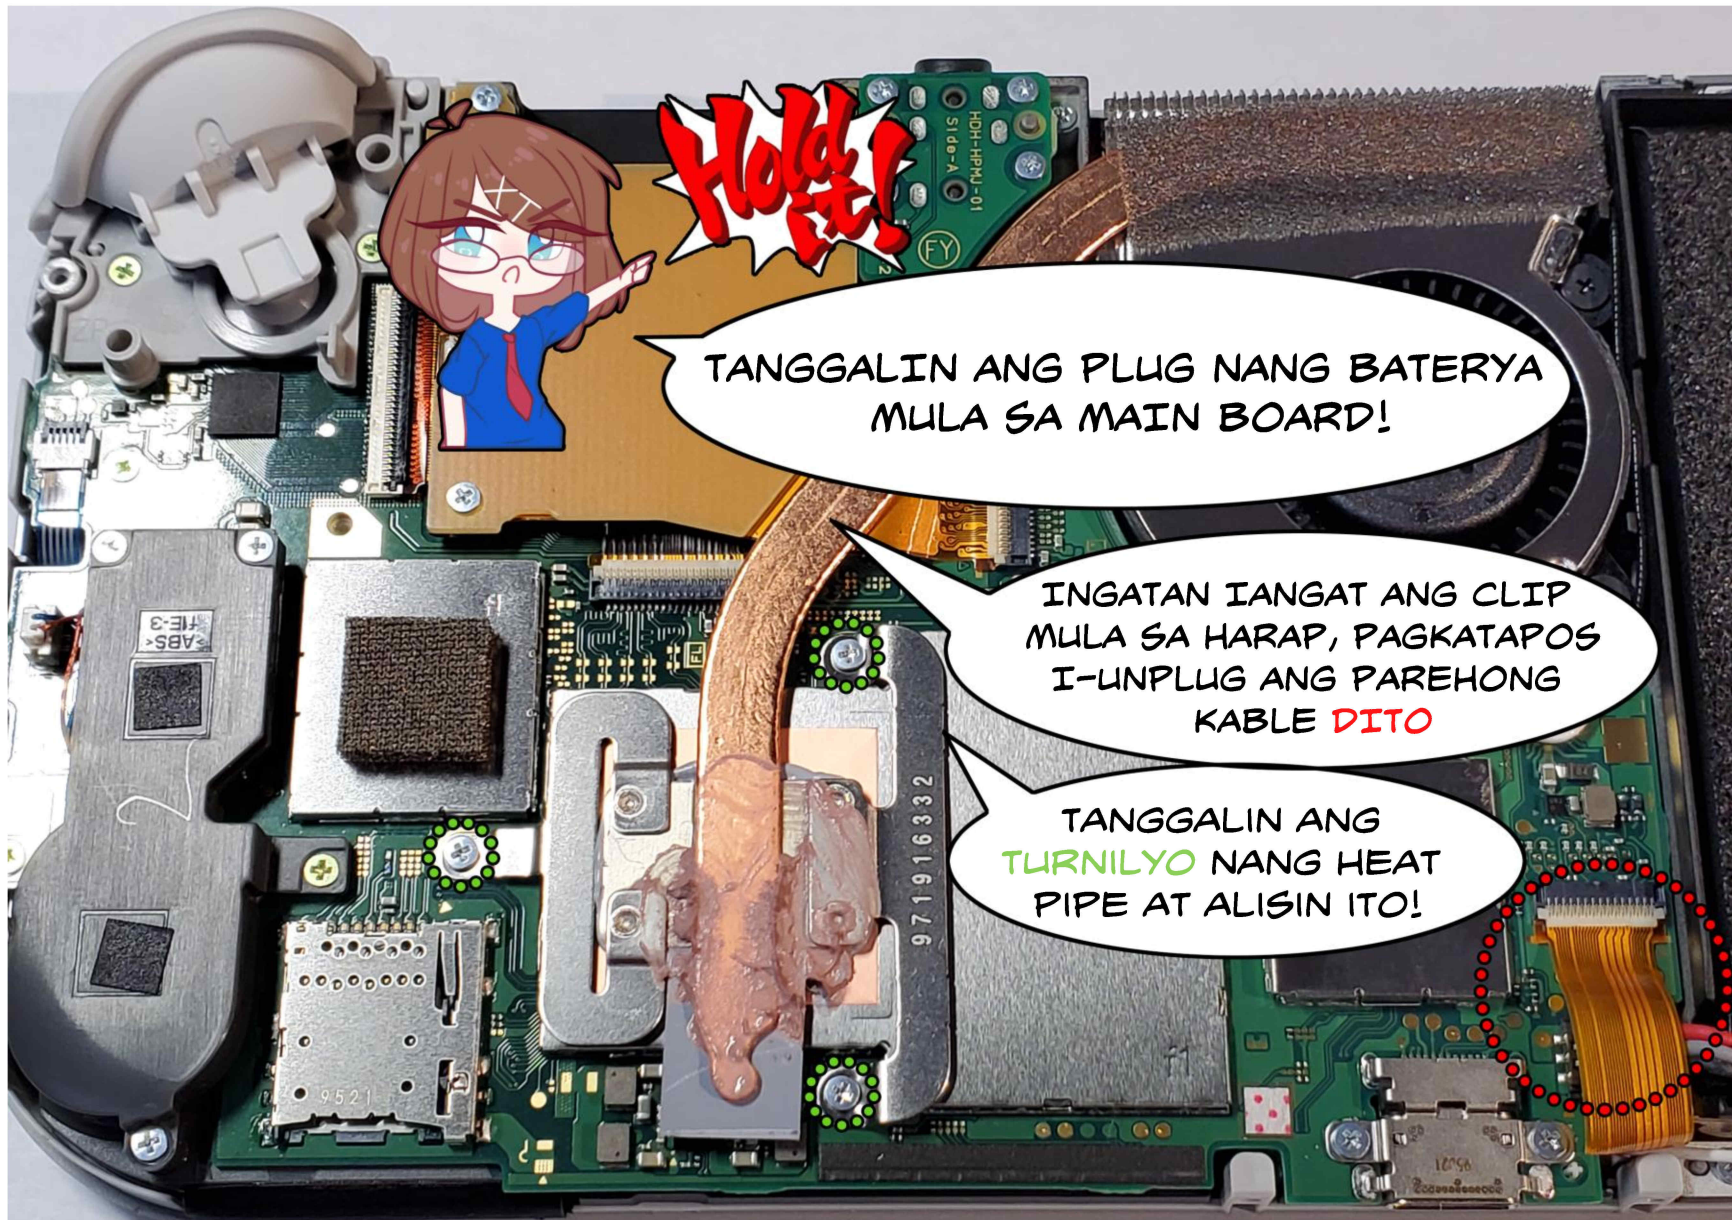


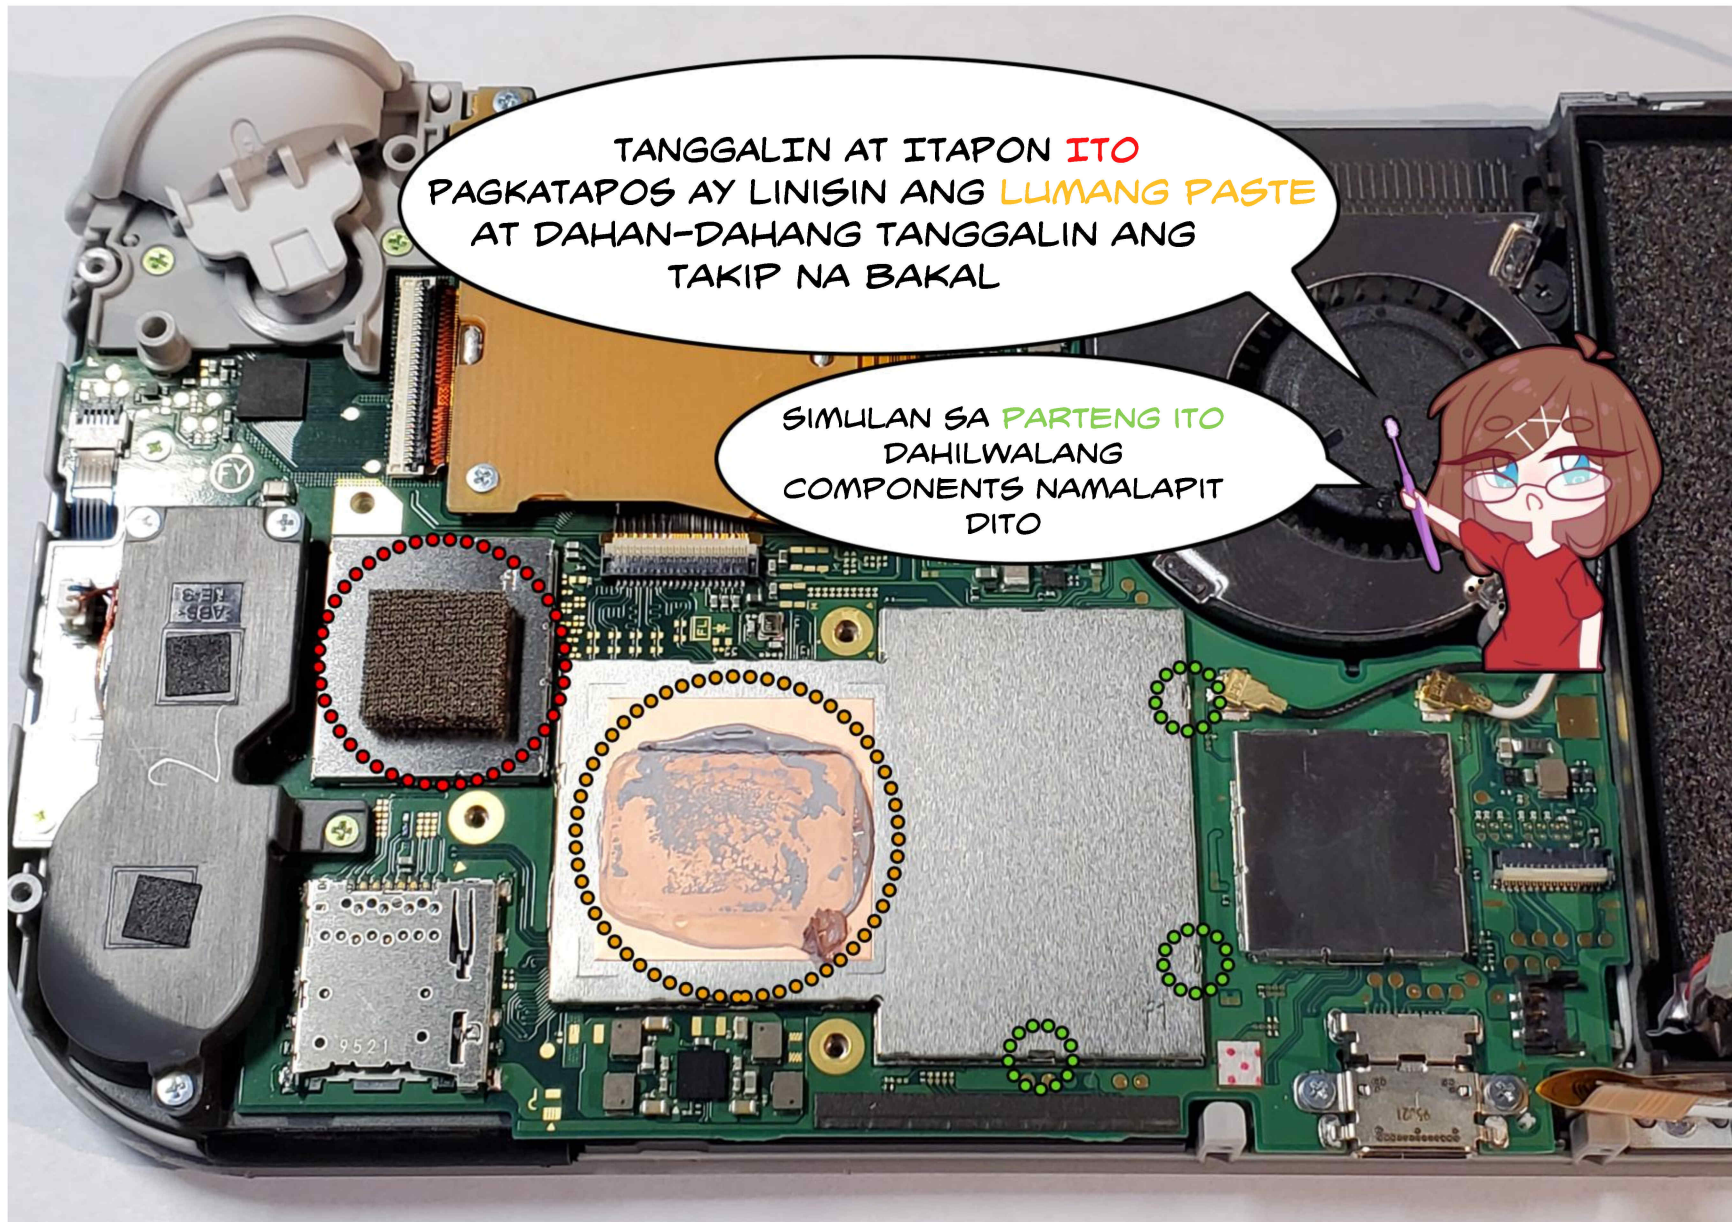


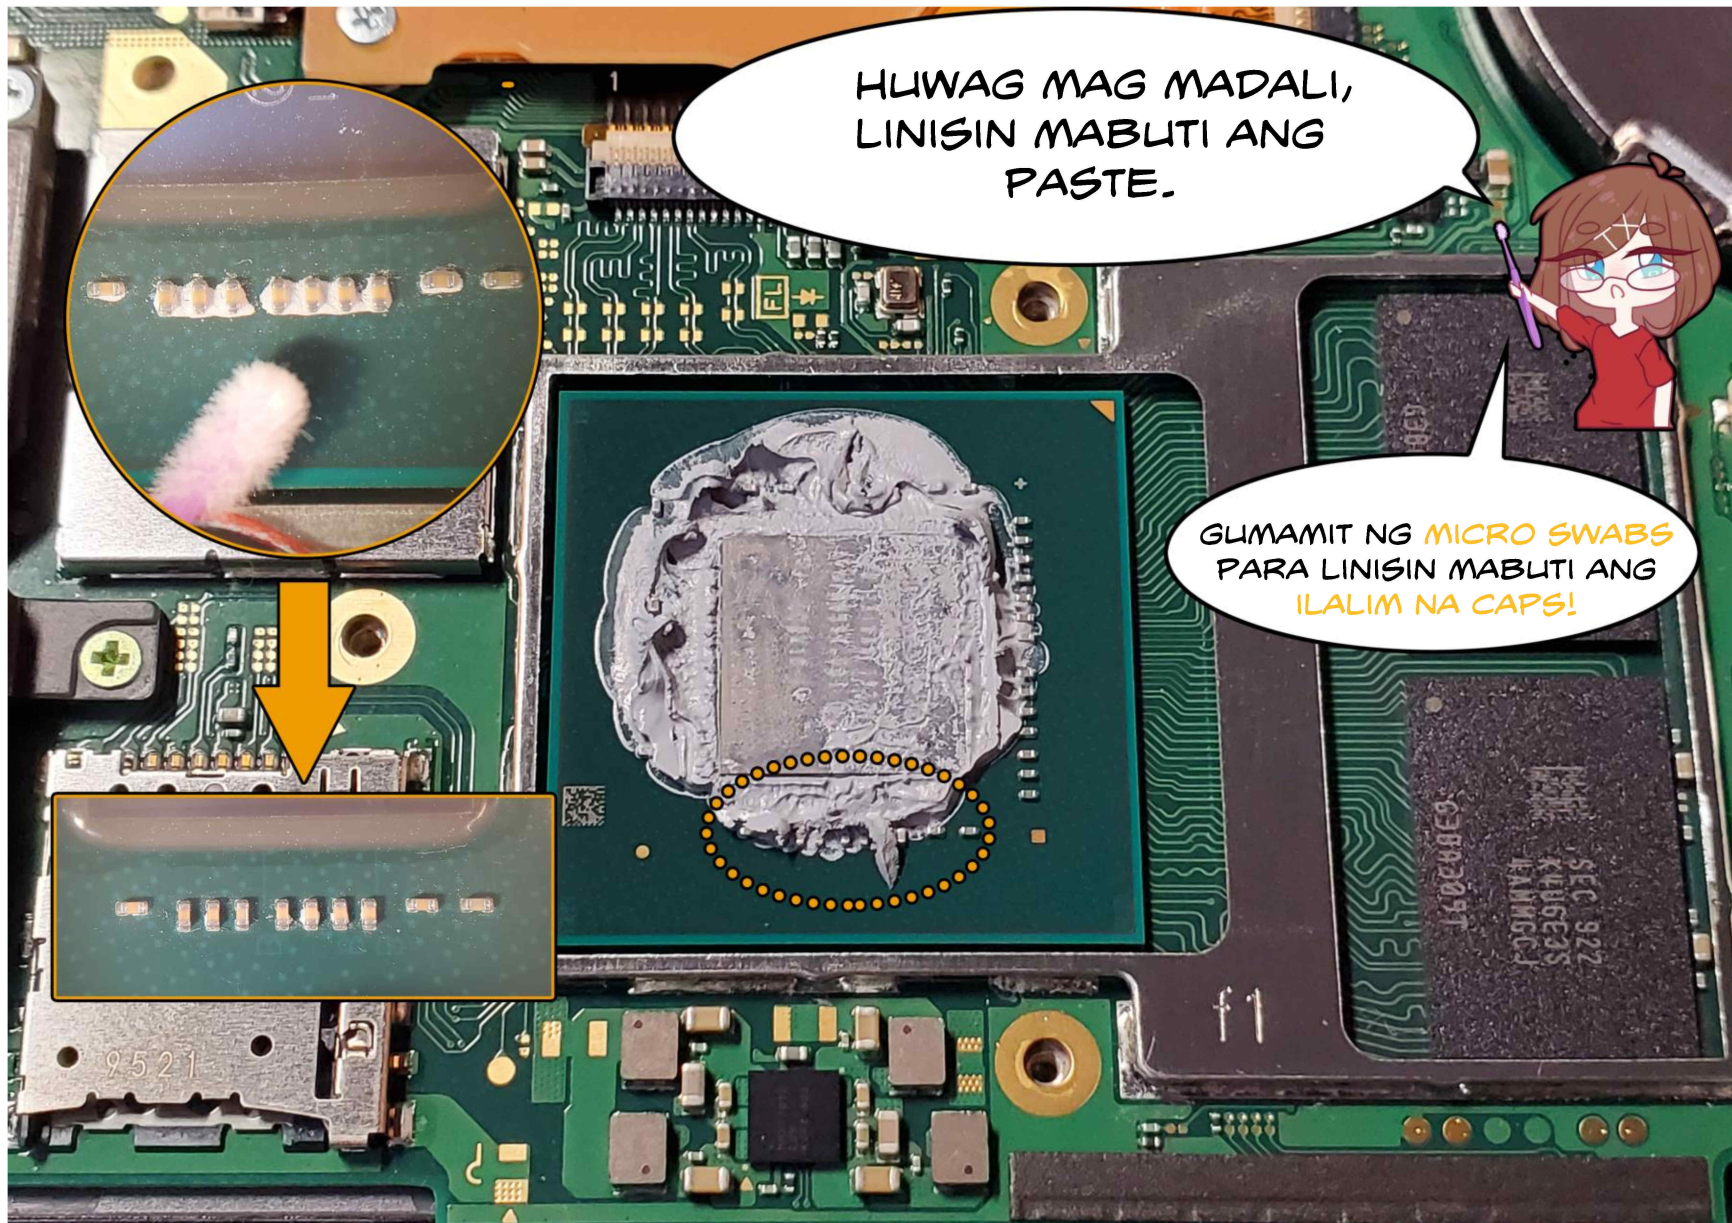




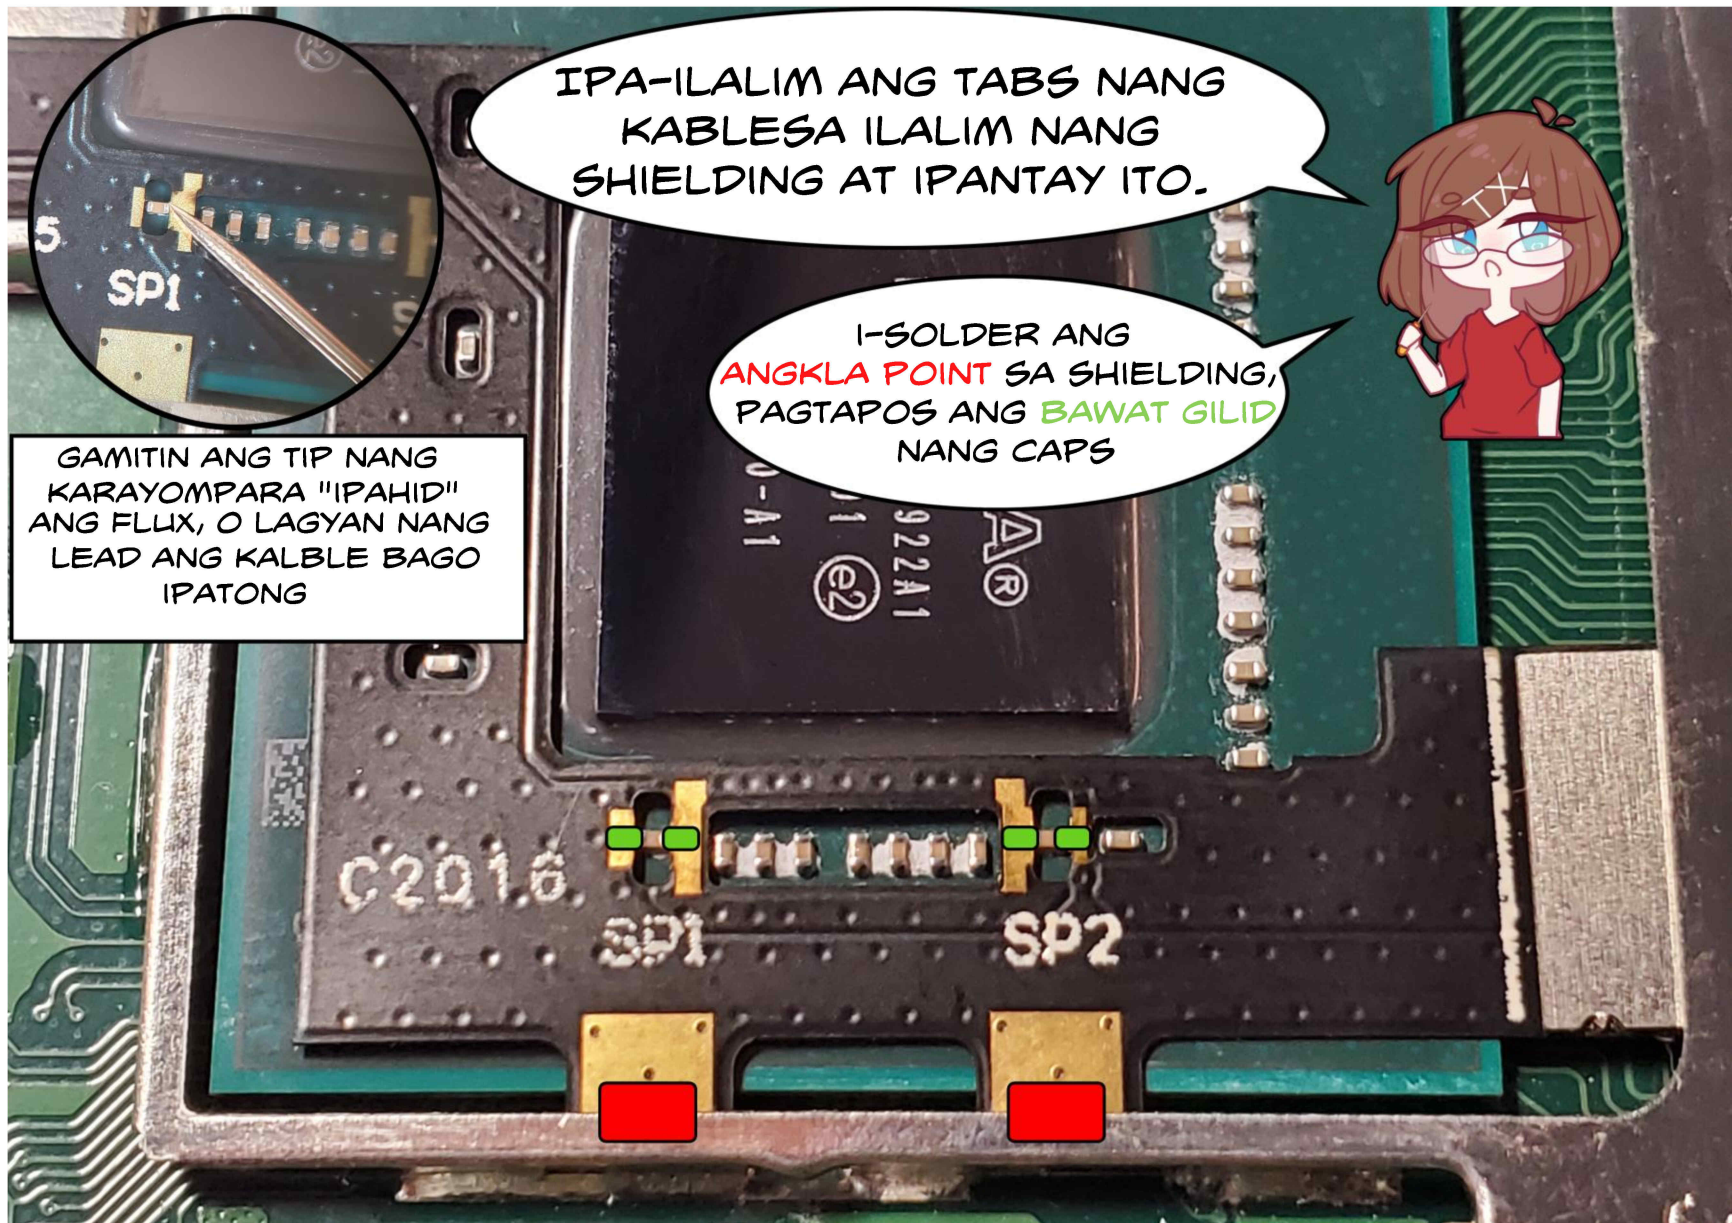


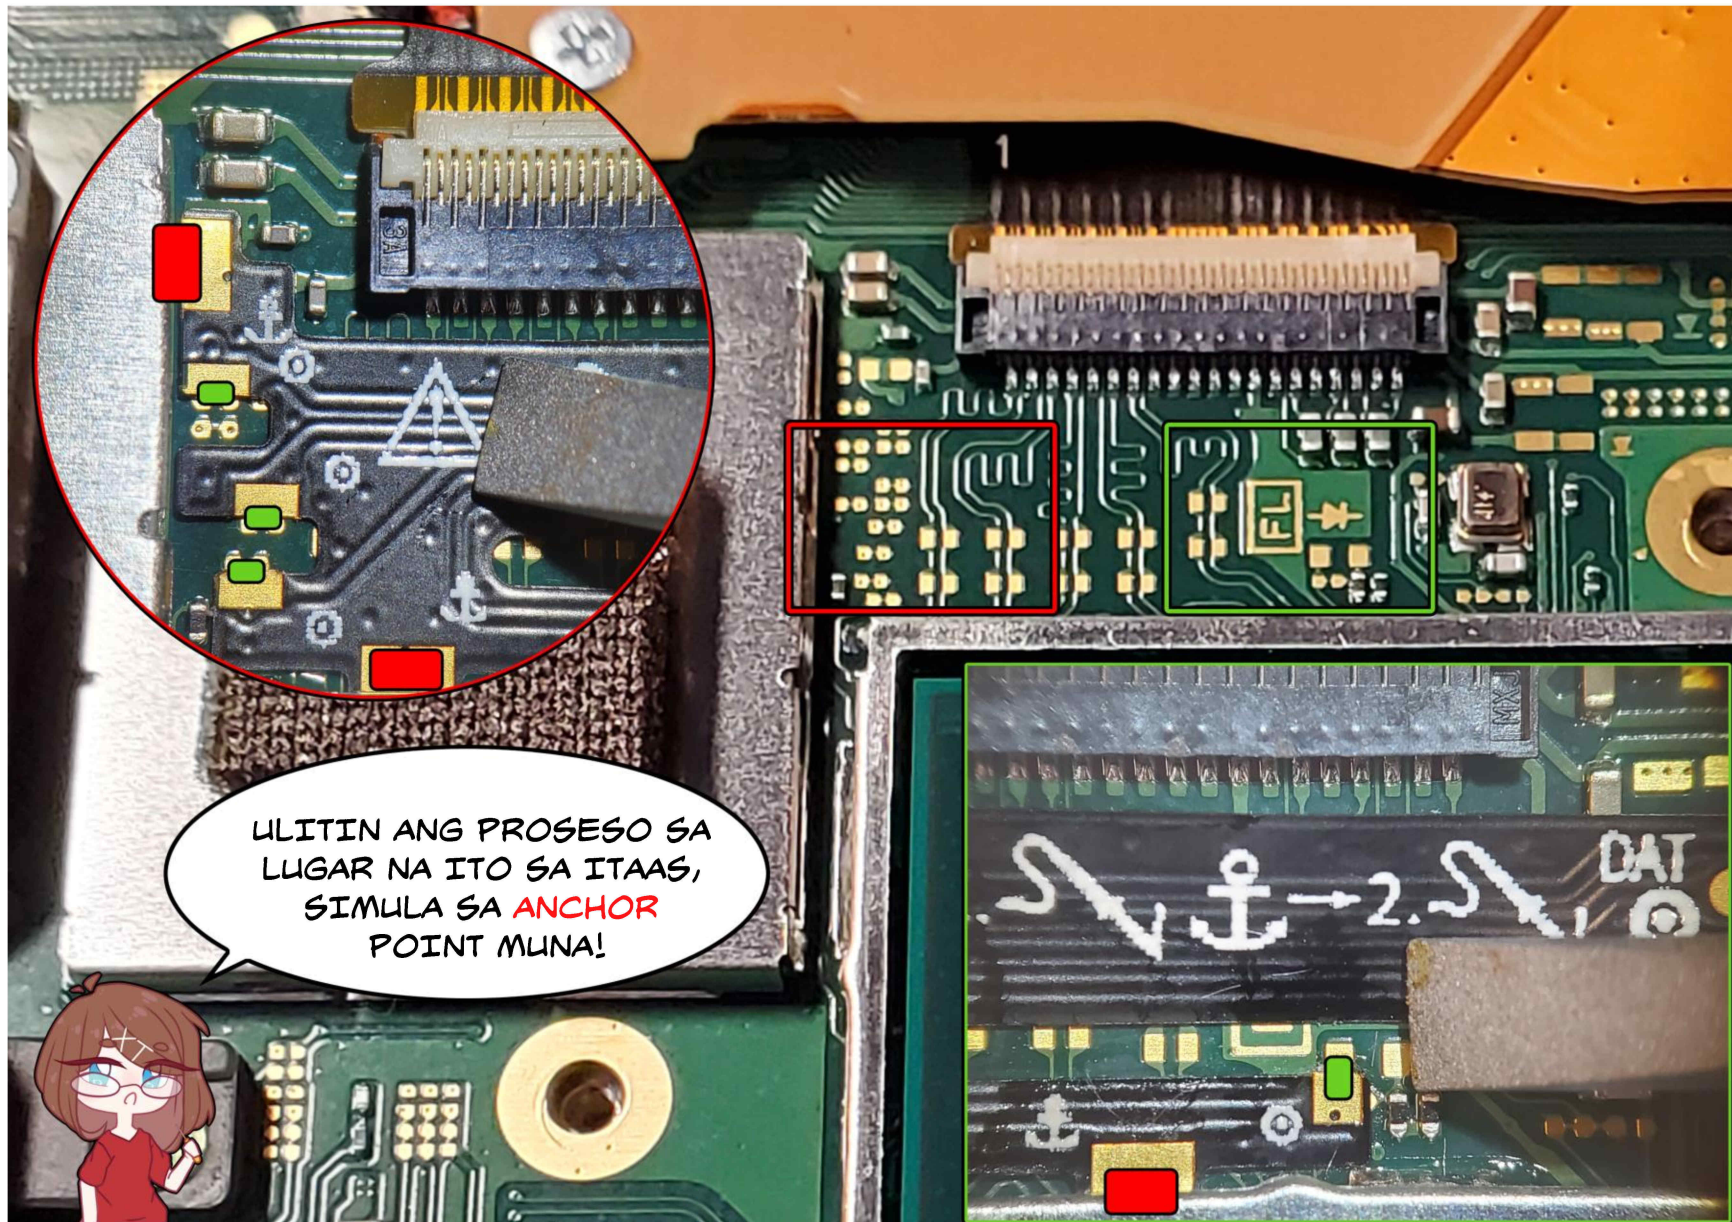

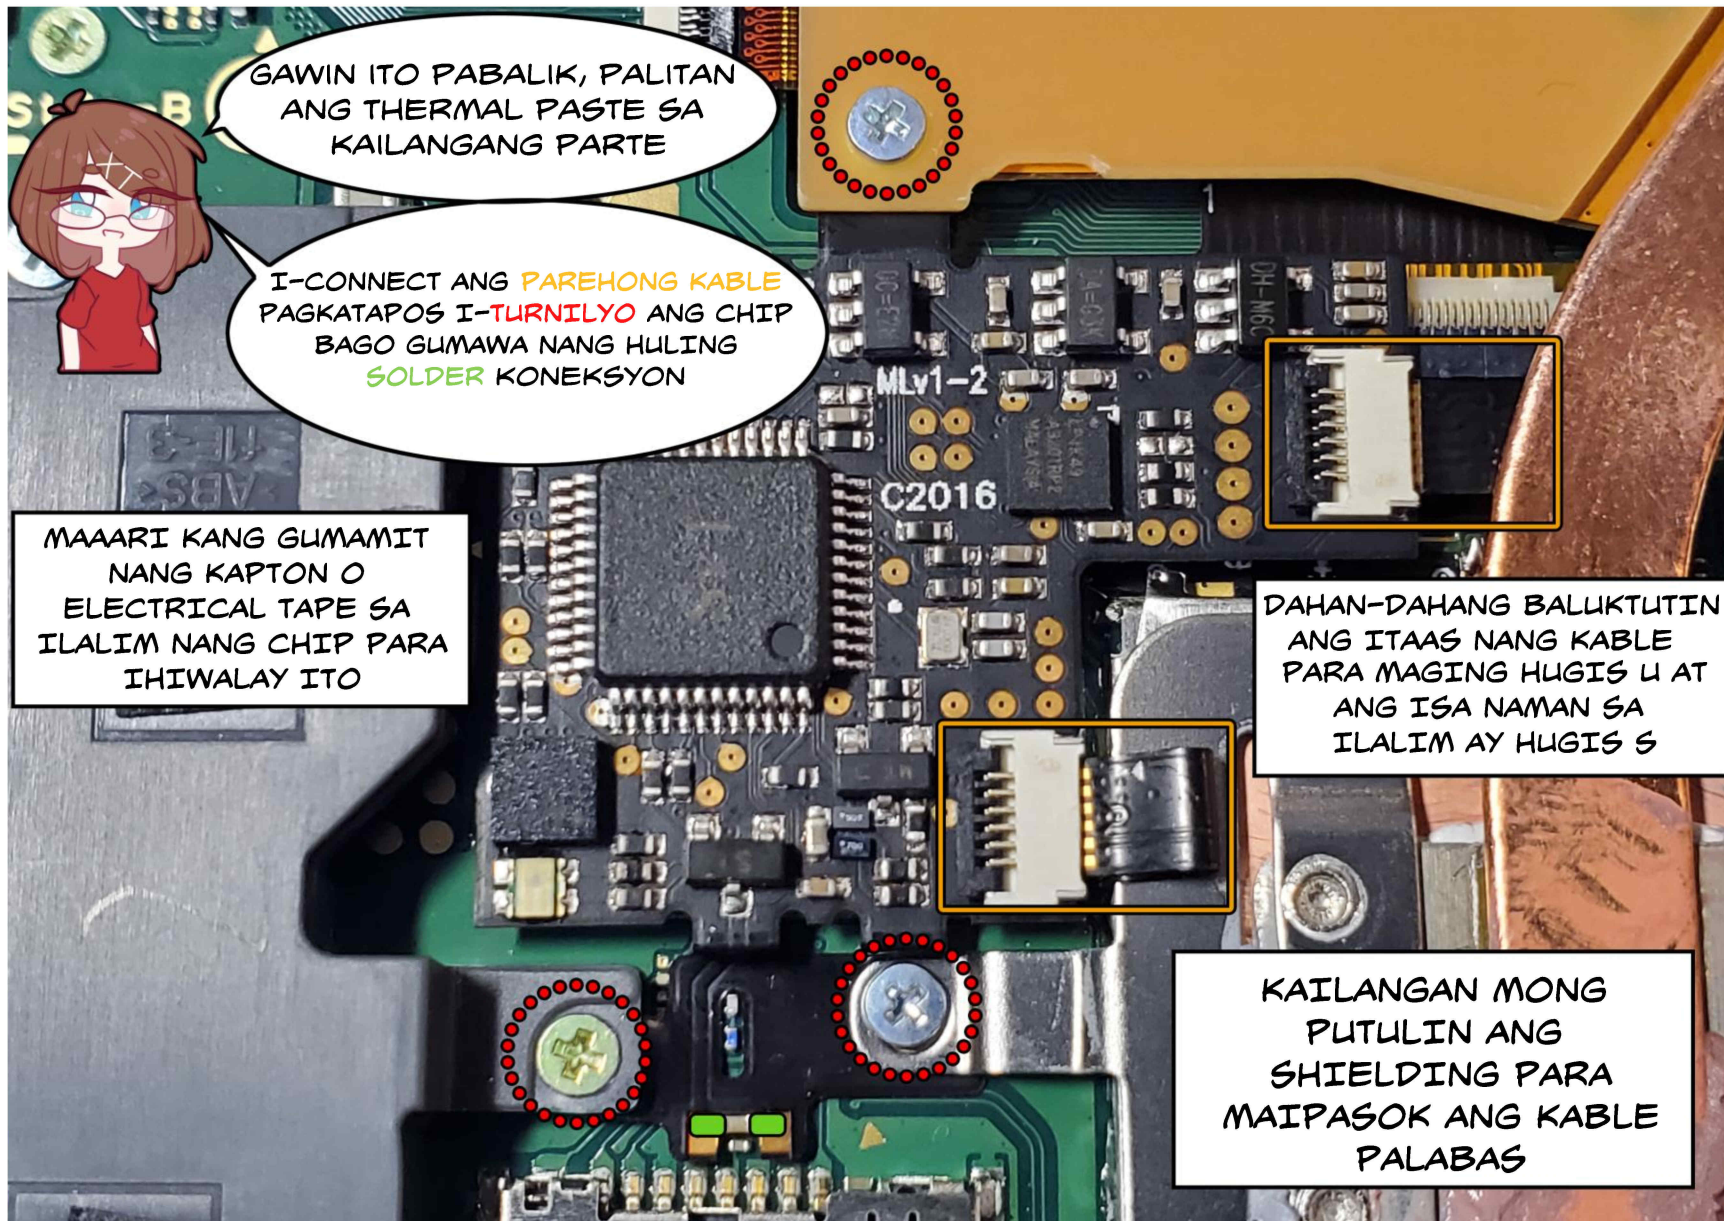

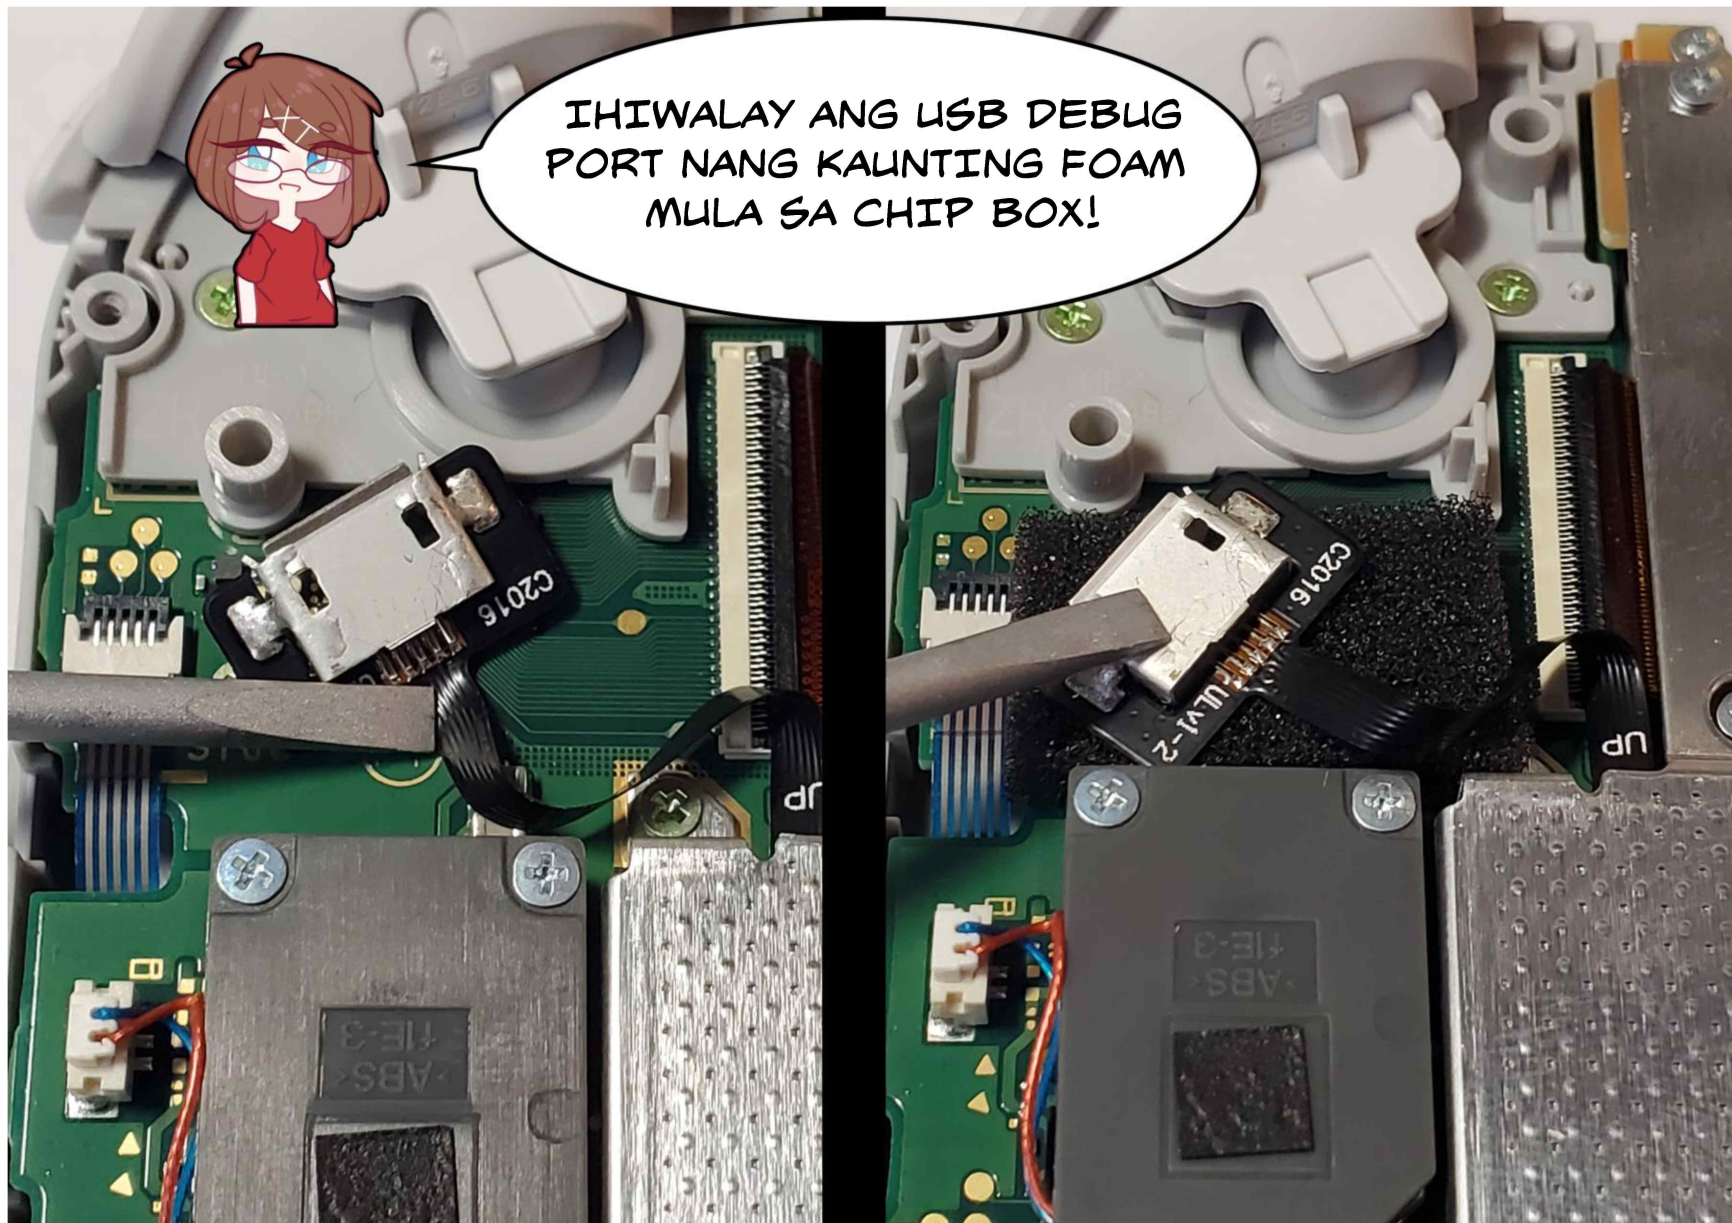

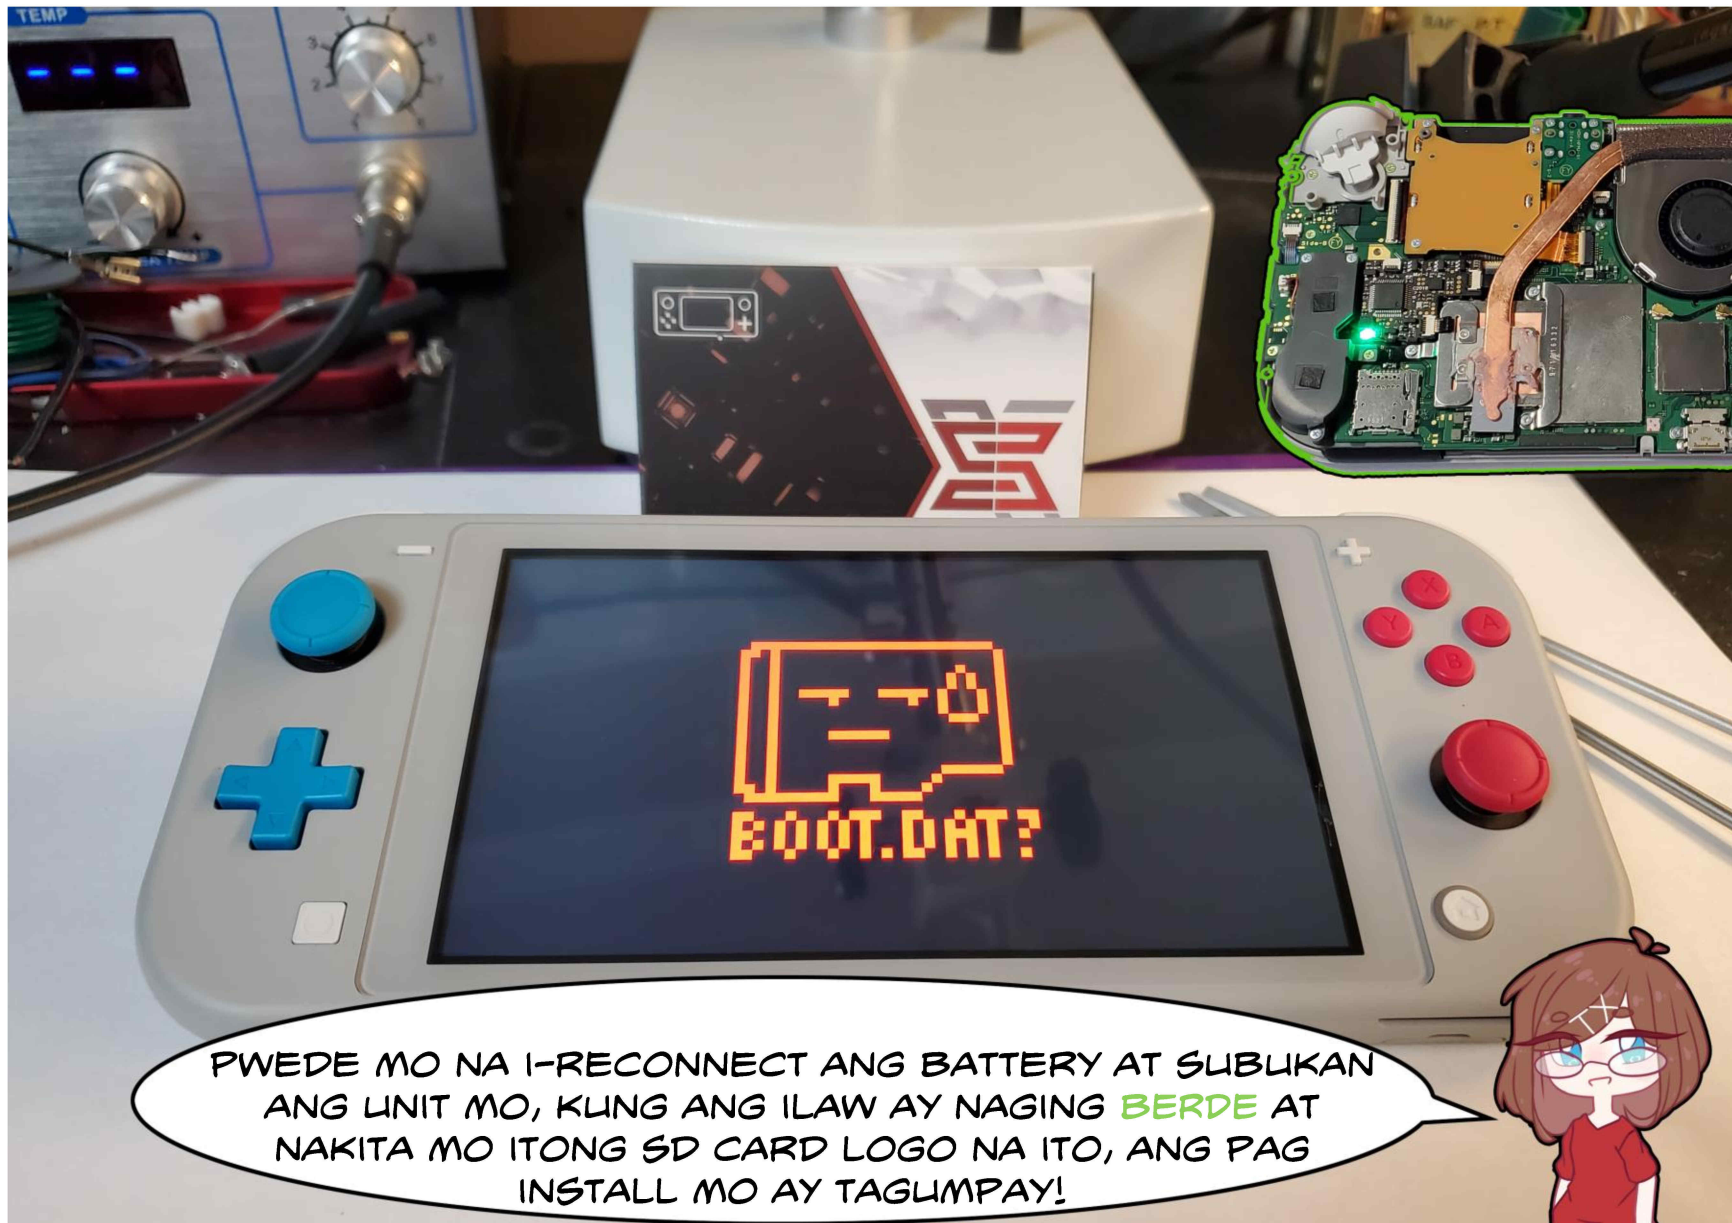

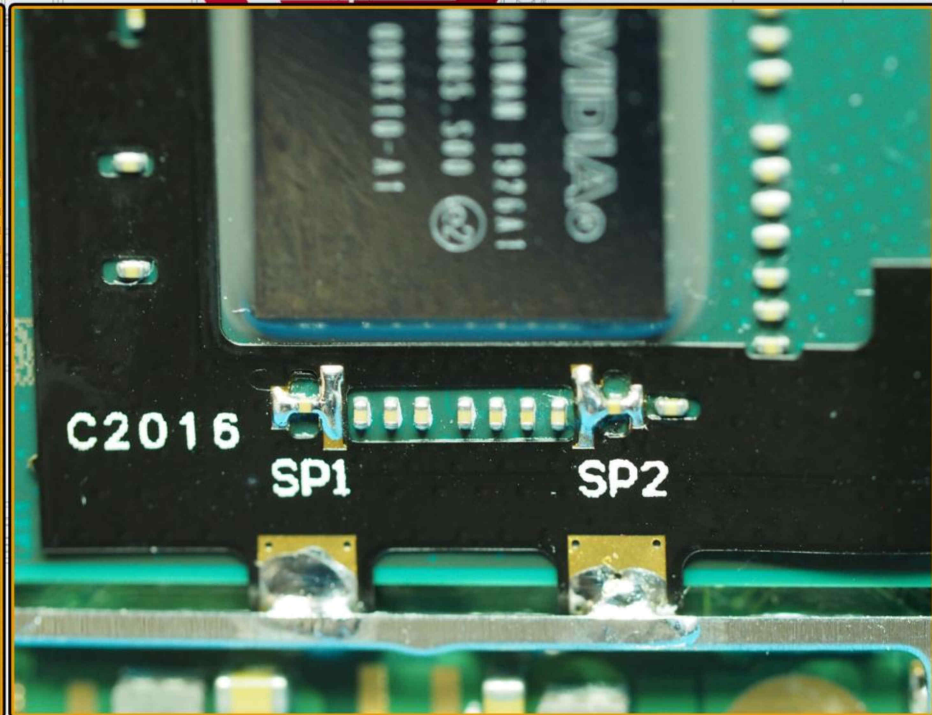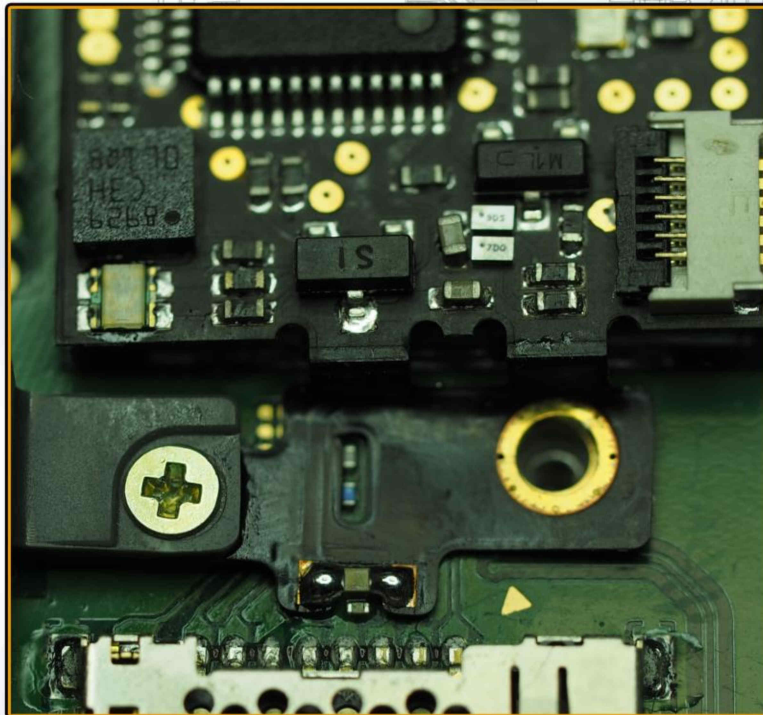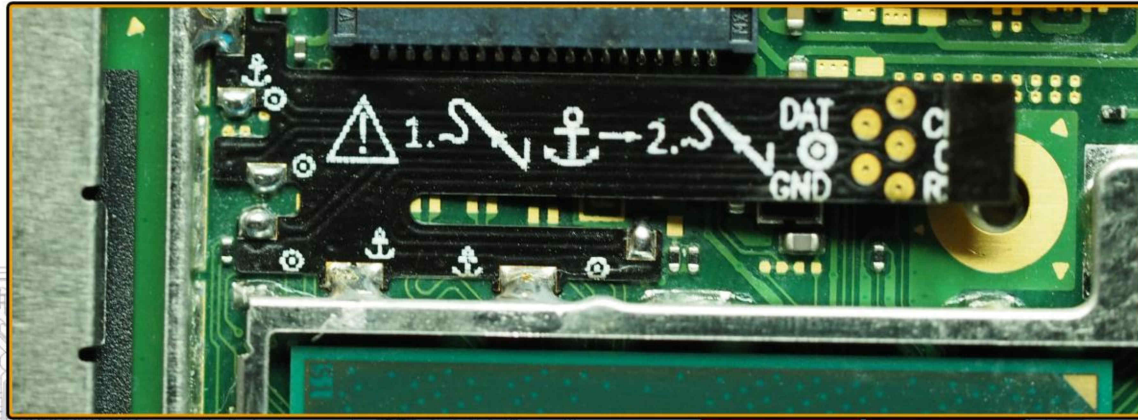

Madalas na Tanong

Q - Gaano kahirap ang pag install na ito?

A - Ito ay advance na pag install, kung wala kang sapat na gamit at karanasan, nirerekomenda na tumawag sa iyong local na technician o mod shop para magawa nila ang pag install para sayo.

Q - Ang ilaw ay kulay rosas at ang sistema ay di bumubukas.

A - Ibig sabihin nito ay ang chip ay nagkakaroon nang problema makipag usap sa NAND, sa madaling sabi di maganda ang pagkaka hinang nito.

Q - Ang ilaw ay kulay berde at bumubukas papunta sa bootloader, pero ang Switch OS ay di bumubukas.

A - Siguraduhing ang ginagamit ay FAT32 formatted na SD card, dahil baka may nawawalang exFAT driver. Maaari mo rin i-check ang connection nang SP1.

Q - Kailang ko pa nang tulong!

A - Sumali sa support forums <https://team-xecuter.com/community/>) o chat sa (<https://xecuter.rocks/>).